



THERMEX COFFEE ESPRESSO BASIC 1230

DANSK ■ ENGLISH

VEJLEDNING
■ instruction Manual 

YDERLIGERE INFORMATION

Mer informasjon ■ Mer information ■ Lisätietoja
Más información ■ Further Information



THERMEX SCANDINAVIA A/S 

www.thermex.dk



THERMEX SCANDINAVIA S.L.U. 

www.thermex.es



THERMEX SCANDINAVIA AS 

www.thermex.no



THERMEX SCANDINAVIA A/S 

www.thermex.fi



THERMEX SCANDINAVIA AB 

www.thermex.se



DANSK

| | |
|--------------------------------|----|
| 1. SIKKERHED | 4 |
| 2 PRODUKTOVERSIGT | 8 |
| 3 FØR FØRSTE BRUG | 12 |
| 4 BETJENING | 17 |
| 5 INDSTILLINGER | 20 |
| 6 RENGØRING OG VEDLIGEHOLDELSE | 22 |
| 7 FEJFINDING | 29 |

ENGLISH

| | |
|----------------------------|----|
| 1 SAFETY AND SECURITY | 38 |
| 2 PRODUCT OVERVIEW | 42 |
| 3 BEFORE FIRST USE | 46 |
| 4 OPERATION | 51 |
| 5 SETTINGS AND PREFERENCES | 54 |
| 6 CLEANING AND MAINTENANCE | 56 |
| 7 TROUBLESHOOTING | 63 |

1 SIKKERHED

Din sikkerhed er vigtig for os. Læs venligst denne information, før du bruger dit apparat. Overhold nøje instruktionerne i denne brugervejledning. Vi påtager os intet ansvar for eventuelle problemer, skader eller brande, der skyldes manglende overholdelse af instruktionerne i denne brugervejledning.

Denne brugervejledning skal opbevares, så man altid kan slå op i den. Hvis den sælges, overdrages eller flyttes, skal den følge med produktet.

Produktet kan have forskellige æstetiske egenskaber i forhold til illustrationerne i denne brugervejledning, men drifts-, vedligeholdelses- og installationsinstruktionerne er de samme.

1.1 TILSIGTET BRUG

Følgende sikkerhedsretningslinjer har til formål at forhindre uforudsete risici eller skader som følge af usikker eller forkert betjening af apparatet. Kontrollér emballagen og apparatet ved ankomsten for at sikre, at alt er intakt for at garantere sikker drift. Brug ikke apparatet, hvis du finder skader. Kontakt venligst forhandleren. Bemærk, at modifikationer eller ændringer af apparatet ikke er tilladt af hensyn til din sikkerhed. Utilsigtet brug kan medføre farer og tab af garantikrav.









Apparatet er kun beregnet til privat brug i hjemmet til tilberedning af varme drikke. Brug kun apparatet i lukkede rum under en højde på 2000 meter over havets overflade. Enhver anden brug er ikke tilladt.

Børn eller personer med et handicap, der begrænser deres mobilitet, skal instrueres i brugen af apparatet af en ansvarlig og kompetent person. Den ansvarlige person skal sikre, at apparatet kan bruges sikkert.

Børn må ikke lege med apparatet. Hold børn under 8 år væk fra apparatet, hvis de ikke er under opsyn. Rengøring og brugervedligeholdelse må kun udføres af børn under opsyn.

Fyld kun vandtanken med koldt, frisk drikkevand uden kulsyre.

1.2 FORKLARING AF SYMBOLER

| SYMBOL | BETYDNING |
|---|---|
|  | Risiko for elektrisk stød Dette symbol angiver, at der er fare for personers liv og helbred på grund af spænding. |
|  | ADVARSEL Signalordet angiver en fare med et middelhøjt risikoniveau, som, hvis den ikke undgås, kan føre til død eller alvorlig personskaade. |
|  | FORSIGTIG Signalordet angiver en fare med en lav grad af risiko, som, hvis den ikke undgås, kan resultere i mindre eller moderate skader. |
|  | OPMÆRKSOMHED Signalordet angiver vigtig information (f.eks. skade på ejendom), men ikke fare. |
|  | Dette symbol angiver et enkelt, unummereret instruktionsstrin. |
|  | Dette symbol angiver resultatet af et eller flere tidligere instruktionsstrin. |
|  | Dette symbol angiver et hint eller et tip. |
|  | Stiplede rammer på billeder betyder, at trinene er valgfrie. |

1.3 SIKKERHEDSINSTRUKTIONER


ADVARSEL - Risiko for sundhedsskader

Et snavset apparat kan udgøre en sundhedsrisiko.

- ▶ Følg rengøringsanvisningerne for apparatet.
- ▶ Hvis forsyningsledningen er beskadiget, skal den udskiftes af producenten, dennes serviceagent eller tilsvarende kvalificerede personer for at undgå fare.
- ▶ Apparatet må ikke nedsænkes.
- ▶ **ADVARSEL:** Brug ikke apparatet, hvis overfladen er revnet.
- ▶ Varmeelementets overflade er udsat for restvarme efter brug.
- ▶ Må ikke bruges udendørs.
- ▶ Apparatet er beregnet til brug i husholdningen og lignende anvendelser som f.eks:
 - personale køkkenområder i butikker, kontorer og andre arbejdsmiljøer;
 - bondegårde;
 - af kunder på hoteller, moteller og andre boligområder;
 - bed and breakfast-miljøer.
- ▶ Kaffemaskinen må ikke placeres i et skab, når den er i brug
- ▶ Dette apparat kan bruges af børn fra 8 år og opefter og personer med nedsatte fysiske, sensoriske eller mentale evner eller manglende erfaring og viden, hvis de er blevet overvåget eller instrueret i at bruge apparatet på en sikker måde og forstår de involverede farer. Børn må ikke lege med apparatet. Rengøring og brugervedligeholdelse må ikke udføres af børn, medmindre de er ældre end 8 år og under opsyn. Opbevar apparatet og dets ledning utilgængeligt for børn under 8 år.
- ▶ **ADVARSEL:** Forkert brug kan medføre
- ▶ personskade. **ADVARSEL:** Undgå at spille på stikket.
- ▶ Produktinformation om strømforbrug og tid til at nå den relevante lave strømtilstand: Fra-tilstand: 0,5W; Den maksimale tid til at nå den gældende lave strømtilstand: 30 minutter.


2 PRODUKTOVERSIGT

Oversigt over apparatet og dets komponenter:

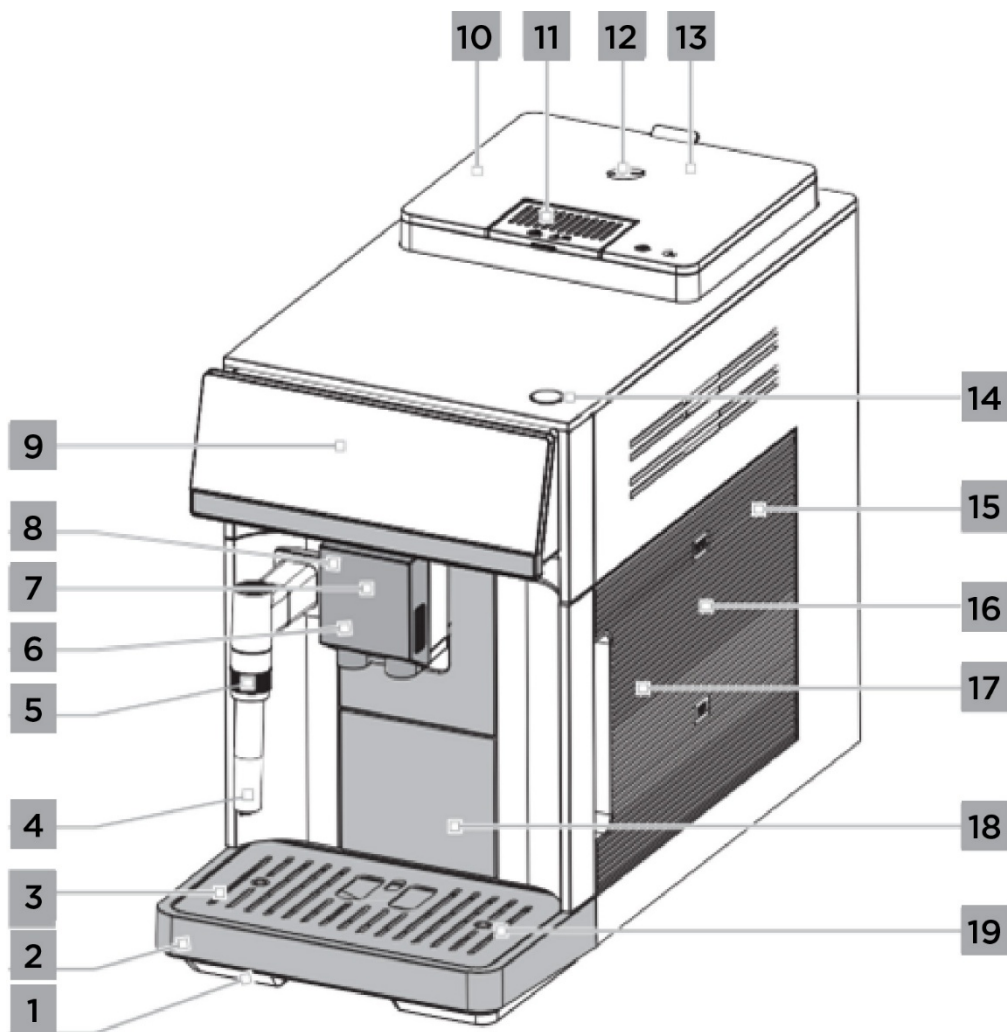


| POS. | KOMPONENT | POS. | KOMPONENT |
|------|-------------------------------------|------|----------------------------|
| 1 | Drypbakke | 18 | Beholder til kaffegrums |
| 2 | Dæksel til drypbakke | 19 | "Drypbakke fuld"-indikator |
| 3 | Bakke til kopper | | |
| 4 | Dampdyse | | |
| 5 | Ring til udvælgelse af mælkeskum | | |
| 6 | Drikkevareudtag, højdejusterbart | | |
| 7 | Dispenser til drikkevarer | | |
| 8 | Dæksel til drikkevareudløb | | |
| 9 | Kontrolpanel | | |
| 10 | Låg til bønnebeholder | | |
| 11 | Skakt til formalet kaffe | | |
| 12 | Beholder til kaffebønner | | |
| 13 | Justeringshjul til slibning | | |
| 14 | On/Off-knap | | |
| 15 | Vandtank | | |
| 16 | Servicedør | | |
| 17 | Bryggeenhed | | |

2.1 LEVERINGENS OMFANG

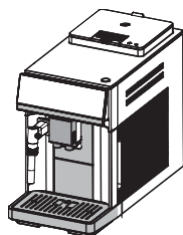

1

 

2



 
3



4



5



6

Pos. Vare

1 Apparat

2 Rengøringsklud

3 Vandfilter*

4 Måleske

POS. VARE

5 Rengøringsbørste

6 Teststrimmel

* afhængigt af apparatets type

2.2 KONTROLPANEL

- ⓘ Sørg for, at betjeningselementerne altid er rene og
- ⓘ tørre. Dæk ikke kontrolpanelet til med genstande.



| SYMBOL | BETYDNING |
|--------|-----------------------------------|
| | Vandtanken er tom |
| | Beholderen til kaffegrums er fuld |
| | Apparatet har en fejl |
| | Skift vandfilter |
| | Rengøring af kaffe |
| | Afkalk apparatet |
| | Dispenser 2 kopper |
| | Juster koppens volumen |

| SYMBOL | BETYDNING |
|----------|-----------------------------------|
| | Juster kaffestyrken |
| | Brug kaffepulver |
| | Beholderen med kaffebønner er tom |
| | Varme drikke |
| | Kolde drikke |
| | Min kaffefunktion |
| | Dampfunktion |
| Heat Up | Apparatet varmer op |
| CoolDown | Apparatet køler ned |

3 FØR FØRSTE BRUG

Rengør apparatet og dets komponenter. Gør apparatet klar til brug.

- ❗ Se også den medfølgende quick start-guide.

3.1 SÆT APPARATET OP

⚠ OBS!

Forkert indledende opsætning kan beskadige apparatet.

- Brug kun apparatet i et frostfrit rum.
- Hvis apparatet har været transporteret eller opbevaret ved temperaturer under 0 °C, skal du vente 3 timer ved stuetemperatur, før du tager det i brug.

1. Placer apparatet på en vandtæt, jævn og tilstrækkelig stabil overflade.
2. Sørg for, at apparatets ventilationsåbninger ikke er dækket til.
3. Fjern eventuelle beskyttelsesfilm og klistermærker.


3.2 TILSLUT APPARATET

- Sæt apparatets netstik i en stikkontakt i nærheden af apparatet.

3.3 PÅFYLDNING AF VANDTANKEN

- ❗ Hvis du bruger vandtanken for første gang, skal du skylle den ud først.


1. Træk vandtanken ud i håndtaget, og fjern låget.

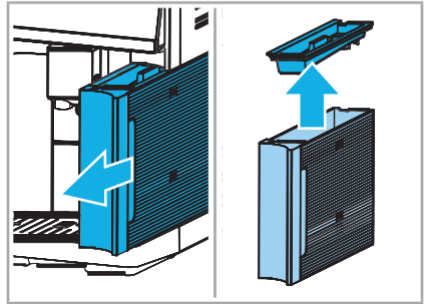

2. Fyld vandtanken med koldt, frisk drikkevand uden kulsyre op til MAX-mærket.



- ❗ Hvis du trækker vandtanken halvvejs ud, kan du fylde vandtanken gennem indløbet.

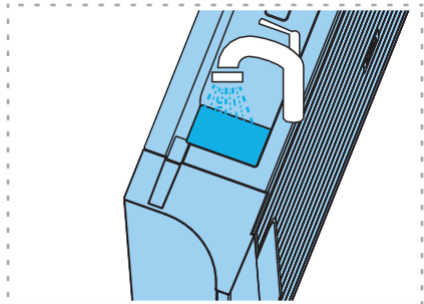

3.4 FYLDNING AF KAFFEBØNNEBEHOLDEREN


⚠ OPMÆRKSOMHED

Forkert brug kan beskadige kværnen.

Brug kun ristede kaffebønner.

- ▶ Brug ikke kaffebønner, der er
- ▶ blevet behandlet med tilsætningsstoffer eller karamelliseret.
- ▶ Fyld ikke kaffepulver i kaffebønnebeholderen.
- ▶ Der må ikke hældes væske i kaffebønnebeholderen.

1. Åbn låget til bønnebeholderen.

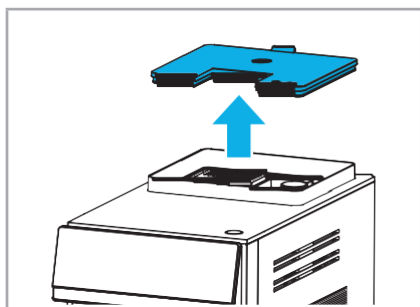

2. Fyld kaffebønnerne i bønnebeholderen.



3. Luk låget på bønnebeholderen.

- ⓘ Kontrolpanelet viser [☞], når kaffebønnebeholderen skal genopfyldes.

3.5 VANDFILTER

Et vandfilter minimerer kalkaflejringer, reducerer urenheder i vandet og forbedrer smagen af kaffedrikken.

⚠ OPMÆRKSOMHED

Kalkaflejringer kan beskadige apparatet.


- ▶ Skift vandfilteret senest efter 2 måneder.
- ▶ Vær opmærksom på symbolerne på kontrolpanelet.
- ⓘ Udskift også vandfilteret af hygiejniske årsager.

3.4.1 KLARGØRING OG INDSÆTTELSE AF VANDFILTERET


- ⓘ Du kan også bruge apparatet uden vandfilter.
- ⓘ Før vandfilteret aktiveres, skal det først forberedes.

1. Ryst vandfilteret i ca. 5 sekunder.
2. Tag vandfilteret ud af emballagen, og drej datoindikatoren til de næste 2 måneder.
3. Sænk vandfilteret ned i en beholder med vand.

4. Ryst vandfilteret i 10 sekunder, indtil der ikke slipper flere vandbobler ud.

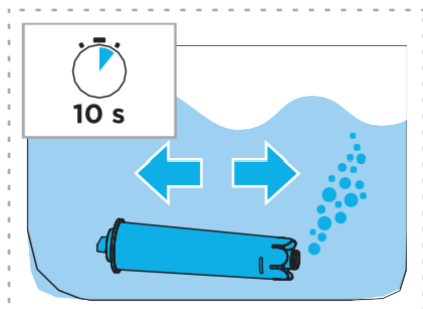

5. Tryk vandfilteret fast lige ned i vandtankens tilslutning.

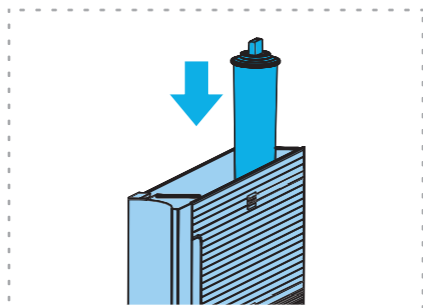


6. Sæt vandtanken tilbage i apparatet.

3.5 KONTROL AF VANDETS HÅRDHED


- ❗ Det er vigtigt at indstille vandets hårdhed korrekt.
- ❗ Brug koldt, frisk drikkevand uden kulsyre.
- ❗ Du kan spørge din lokale vandforsyning om det lokale vand.

hårdhed eller tjek den med den medfølgende teststrimmel.

1. Dyp teststrimlen kortvarigt i et glas vand i 2 sekunder.

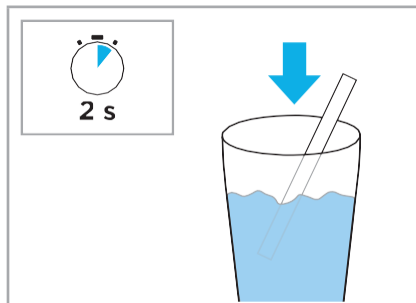

2. Lad teststrimlen tørre i 10 sekunder.
3. Tjek vandets hårdhedsgrad ved at se på misfarvningen af teststrimlen.

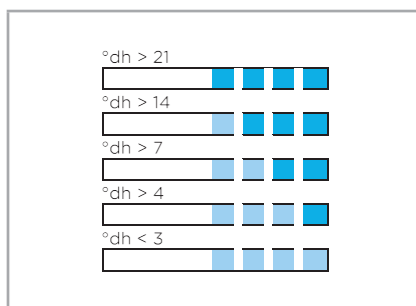


3.6 FØRSTE INDSTILLINGER

1. Tryk på [Symbol til/fra]. ☑
 [Americano], [Damp], [☒], [☕], [☕], [Hot Brew] lyser med 100% lysstyrke, [Cold Brew] og [☕] lyser med 50% lysstyrke.
2. For at indstille, skal du trykke på det tilsvarende symbol gentagne gange, indtil kontrol-

panelet viser den ønskede indstilling.

Se kapitlet "Indstilling af kaffetemperatur",
Se kapitlet "Indstilling af vandets hårdhed"

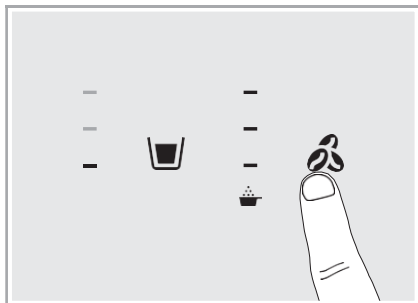

3. For at gemme indstillingen skal du trykke på symbolerne [Americano] og [Steam] samtidigt i 3 sekunder.

✔ Apparatet gemmer indstillingen og kører en skyllecycelus.

3.6.1 INDSTILLING AF KAFFETEMPERATUR

- 🕒 Tryk på [☑️] gentagne gange, indtil kontrolpanelet viser den ønskede kaffetemperatur.

📌 Tilgængelige kaffetemperaturer:

| LED | Temperatur |
|-----|------------|
| — | normal |
| — | høj |
| — | max |

3.6.2 INDSTILLING AF VANDETS HÅRDHED

1. Kontrollér vandets hårdhedsgrad ud fra misfarvningen af teststrimlen. Se kapitlet "Kontrol af vandets hårdhed"

2. Tryk på [☑️] gentagne gange, indtil kontrolpanelet viser den ønskede vandhårdhedsgrad.

📌 Tabellen viser tildelingen af niveauerne 1 (blødt) til 5 (meget hårdt) til de forskellige grader af vandhårdhed:

| Symbol | Niveau | °dh |
|--------|--------|------|
| ☑️ | 1 | < 3 |
| ☑️ | 2 | > 4 |
| ☑️ | 3 | > 7 |
| ☑️ | 4 | > 14 |
| ☑️ | 5* | > 21 |

* Fabriksindstilling

3.6.3 INDSTILLING AF FILTERPÅMINDELSE

📌 Alle nye vandfiltre skal aktiveres først.

📌 Hvis du ikke bruger et vandfilter, behøver du ikke at aktivere filterpåmindelsen.

📌 [☑️] lyser med 50% lysstyrke.

1. Tryk på [☑️] for at aktivere filterpåmindelsen.

✔ [☑️] lyser med 100% lysstyrke.

2. For at gemme indstillingen skal du trykke på symbolerne [Americano] og [Steam] samtidigt i 3 sekunder.

- ✔ Apparatet gemmer indstillingerne.
- ✔ Når aktiveringsprocessen er færdig, slukkes [☰].
- ✔ Apparatet begynder at varme op og skylle.
- ✔ Apparatet er klar til brug.

3.6.4 GENERELLE BRUGSANVISNINGER

- ❗ Af tekniske årsager damp kan slippe ud af apparatet under drift.
- ❗ Under drift kan der dannes vanddråber ved ventilationsåbningerne og på låget til den formale kaffeskakt.
- ❗ Når apparatet bruges første gang, efter et rengørings- eller afkalkningsprogram, eller hvis det ikke har været i brug i en længere periode, vil den første drik ikke have den fulde aroma og bør ikke indtages.

4 BETJENING


4.1 TÆND FOR APPARATET

- ▶ Tryk på [Symbol On/off] for at tænde for apparatet.
- ✔ Apparatet begynder at varme op og skylle.
- ✔ Når alle drikkevaresymboler lyser, er apparatet klar til brug.

4.2 SLUK FOR APPARATET

- ▶ Sådan slukker du for apparatet, tryk på [Symbol til/fra].
- ✔ Apparatet skyller og slukker.
- ❗ Apparatet skylles og slukkes automatisk 30 minutter efter, at den sidste drik er tilberedt.

4.3 INDSTILLING AF SLIBEGRAD

- ❗ Du kan indstille formalingsgraden i halve trin fra 1 (grovt) til 7 (fin). 
- ▶ For at indstille en fin slibningsgrad skal du dreje slibejusteringshjulet til venstre.
- ▶ For at indstille en grovslibningsgrad skal du dreje slibejusteringshjulet til højre.

4.4 TILPASNING AF DRIKKEVARER

Før tilberedningen kan du tilpasse din drik til din smag.

441 INDSTILLING AF PÅFYLDNINGSMÆNGDE

- ▶ Tryk på [] gentagne gange, indtil kontrolpanelet viser den ønskede påfyldningsmængde.

Tilgængelige påfyldningsmængder:

| LED | Antal |
|-----|--------|
| — | lille |
| — | |
| — | Medium |
| — | |
| — | stor |
| — | |

442 Indstilling af kaffestyrke

- ▶ Tryk på [] gentagne gange, indtil kontrolpanelet viser den ønskede kaffestyrke.
- ▶ Tilgængelige kaffestyrker:

| LED | Styrker |
|-----|---------|
| — | mild |
| — | |
| — | medium |
| — | |
| — | stærk |
| — | |

443 SÆTTER MIN KAFFE OVER

1. Tryk på [Min kaffe] i 3 sekunder. [My Coffee],[],[Hot Brew] lyser med 100 % lysstyrke, [Cold Brew] lyser med 50 % lysstyrke.

2. Indstil kaffestyrken.

Se kapitlet "Indstilling af kaffestyrke"

- ▶ For at indstille en koldbrygget drik, tryk på [Cold Brew].[Cold Brew] lyser med 100 %

[Hot Brew] lyser med 50% lysstyrke.

3. Tryk på [Min kaffe], og apparatet starter tilberedningen.
 4. Tryk på [My Coffee], indtil apparatet laver den kopstørrelse, du ønsker. Apparatet afslutter tilberedningen og gemmer indstillingerne.
- ▶ Kaffedrikken tilberedes og udleveres.
 - ▶ Den oprindelige indstilling af [Min kaffe] er maksimal kaffestyrke og maksimal kopstørrelse.

4.5 TILBEREDNING AF DRICKEVARER

Advarsel - risiko for skoldning
Varme væsker og damp kan forårsage skoldning.

- ▶ Hold ikke nogen dele af din krop under stikkontakten.

Advarsel - Risiko for forbrændinger Nogle dele af apparatet bliver varme under drift.

- ▶ Rør ikke ved nogen dele af apparatet, før du lader dem køle af.
- ▶ Nogle drikkevarer tilberedes i 2 trin.
- ▶ Hvis du vil afbryde drikkevareudskænkningen før tid, skal du trykke på det valgte drikkevaresymbol igen.
- ▶ Drikkevareudløbet kan justeres i højden.

4.5.1 Tilberedning af kaffe Drik af kaffebønner

1. Placer et glas eller en kop under udløbet.


2. Indstil påfyldningsmængden.
Se kapitlet "Indstilling af påfyldningsmængde"
 3. Indstil kaffestyrken. *Se kapitlet "Indstilling af kaffestyrke"*
 4. For at starte tilberedningen skal du trykke på symbolet for en kaffedrik efter eget valg.
- ☑ Kaffedrikken tilberedes og udleveres.

4.5.2 TILBEREDNING AF EN KAFFEDRIK FRA KAFFEPULVER


⚠ OPMÆRKSOMHED

Forkert brug af kaffepulver kan beskadige apparatet.

- 🔴 Tilsæt kun kaffepulver, når apparatet er tændt.
 - 🔴 Fyld aldrig mere end en måleske kaffepulver i.
 - 📌 Funktionen til tilberedning af 2 kopper er ikke tilgængelig for drikke lavet af kaffepulver.
1. For at tænde for apparatet skal du trykke på [Symbol On/off], *se kapitlet "Tænd for apparatet"*.
 2. Placer et glas eller en kop under udløbet.
 3. Åbn låget på den færdigmaledede kaffeskakten.

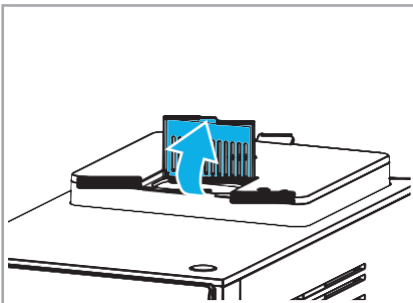

4. Fyld maksimalt 1 måleske kaffepulver i skakten til formalet kaffe.

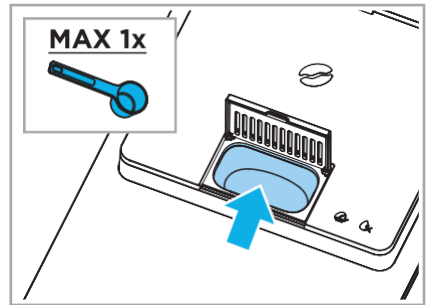

5. Luk låget på skakten til færdigmalet kaffe.
 6. Tryk på [☕] flere gange, indtil [☕] lyser.
 7. Indstil påfyldningsmængden.
Se kapitlet "Indstilling af påfyldningsmængde"
 8. For at starte tilberedningen skal du trykke på symbolet for en kaffedrik efter eget valg.
- ☑ Kaffedrikken lavet af malet kaffe tilberedes og udleveres.

4.6 TILBEREDNING AF DRILLEVARER MED MÆLK


⚠ Advarsel - risiko for forbrænding

Dampdysen kan blive meget varm.


- 🔴 Rør aldrig ved dampdysen, mens den er varm.
- 🔴 Lad dampdysen køle af, før du rører ved den.
- 📌 Brug kold mælk direkte fra køleskabet for at få det bedste resultat.

- i** Stop damptilførslen, før du fjerner mælkekanden med den opskummede/opvarmede mælk for at undgå forbrændinger på grund af stænk af kogende mælk.
- i** Giv ikke damp i mere end 60 sekunder.
- i** Rengør dampdysen, hver gang du har lavet mælkeskum. Tørrede mælkerester er svære at fjerne.

4.6.1 TILBEREDNING AF KAFFE MED MÆLK

1. Tilbered kaffen i en stor kop. *Se kapitlet "Tilberedning af drikkevarer"*
 2. Fyld mælkekanden med den mælk, du vil skumme.
 3. Drej ringen til valg af mælkeskum til positionen "".
 4. Sænk dampdysen ned i mælkekanden, men sænk aldrig den sorte ring ned.
 5. Tryk på [Damp]. Damp leveres gennem dampdysen og giver mælken et cremet skum.
 6. Når den ønskede temperatur (ideelt set 60 °C) og skumtæthed er nået, skal du trykke på [Damp] for at stoppe damptilførslen.
 7. Hæld mælkeskummet i den tidligere tilberedte kaffe.
- ✓** Kaffedrikken med mælk tilberedes.

4.6.2 TILBEREDNING AF VARM MÆLK

1. Fyld mælkekanden med den mælk, du vil opvarme.
 2. Drej ringen til valg af mælkeskum til positionen "".
 3. Sænk dampdysen ned i mælkekanden, men sænk aldrig den sorte ring ned.
 4. Tryk på [Damp]. Der sendes damp ud gennem dampdysen for at opvarme mælken.
 5. Når den ønskede temperatur er nået (ideelt set 60 °C), skal du trykke på [Steam] for at stoppe damptilførslen.
- ✓** Den varme mælk er klar.

4.7 TILBEREDNING AF 2 KOPPER

- i** Denne funktion er ikke tilgængelig for drikke lavet af kaffepulver.
1. Placer 2 glas eller kopper under udløbet.
 2. Tryk på [/J].
 3. Indstil påfyldningsmængden. *Se kapitlet "Indstilling af påfyldningsmængde"*
 4. Indstil kaffestyrken. *Se kapitlet "Indstilling af kaffestyrke"*
 5. For at starte, tryk på symbolet for en drikkevarer efter eget valg, der passer til 2 kopper.
- i** Tilberedningen af drikkevarerne foregår i 2 trin.

- ✓ 2 kopper er forberedt og udleveret.

4.8 TILBEREDNING AF EN KOLD DRIK

- ❗ Koldbryggeteknologi adskiller sig fra traditionel espressobrygning. Du skal vente et stykke tid, når du starter tilberedningen.
1. Placer et glas eller en kop under udløbet. Tilsæt den mængde isterninger, der er i glasset.
 2. Indstil påfyldningsmængden. *Se kapitlet "Indstilling af påfyldningsmængde".*
 3. Indstil kaffestyrken. *Se kapitlet "Indstilling af kaffestyrke".*
 4. Tryk på [Koldt bryg] .
- ✓ [Cold Brew], [Espresso], [Coffee], [Americano] lyser op.
5. For at starte tilberedningen skal du trykke på symbolet for en kaffedrik efter eget valg.
- ❗ Apparatet vil anbefale en kold skylning for at optimere drikkevarens temperatur efter varme tilberedninger. [Nedkøling] lyser op.
 - ✓ Kaffedrikken tilberedes og udleveres.
Når du laver varme drikke efter kolde tilberedninger, vil maskinen varme op til en højere temperatur for at nå en passende temperatur til varme drikke. [Heat up] lyser under opvarmningsprocessen.
 - ❗ Funktionen til tilberedning af kolde drikke er ikke tilgængelig for drikkevarer lavet af kaffepulver.


5 INDSTILLINGER

Du kan justere forskellige indstillinger efter dine behov.

5.1 JUSTERING AF INDSTILLINGERNE

- ❗ Apparatet skal være klar til brug.
1. Tryk på symbolerne [Americano] og [Steam] samtidigt i 3 sekunder.
 2. Apparatet er i indstillingstilstand.
 2. Juster den ønskede indstilling.
 3. For at gemme indstillingen skal du trykke på symbolerne [Americano] og [Steam] samtidigt i 3 sekunder.
- ✓ Apparatet gemmer indstillingen og går tilbage til hovedmenuen.
 - ❗ Efter 30 sekunder uden brugerinteraktion gemmer apparatet indstillingen og går automatisk tilbage til hovedmenuen.

5.1.1 JUSTERING AF KAFFETEMPERATUR


Tryk på  gentagne gange, indtil Kontrolpanelet viser den ønskede kaffetemperatur.






Tilgængelige kaffetemperaturer:

| LED | Temperature |
|-----|-------------|
| — | normal |
| — | high |

—
— max


5.1.2 JUSTERING AF VANDETS HÅRDHED

 1. Kontrollér vandets hårdhedsgrad ud fra misfarvningen af teststrimlen.
Se kapitlet "Kontrol af vandets hårdhed"
 2. Tryk på  gentagne gange, indtil kontrolpanelet viser den ønskede vandhårdhedsgrad.
- i** Tabellen viser tildelingen af niveauerne 1 (blødt) til 5 (meget hårdt) til de forskellige grader af vandhårdhed:



| Symbol | Niveau | °dh |
|--|--------|------|
|  | 1 | < 3 |
|  | 2 | > 4 |
|  | 3 | > 7 |
|  | 4 | > 14 |
|  | 5* | > 21 |

* Fabriksindstilling




5.1.3 UDSKIFTNING AF VANDFILTERET

i  blinker.

1. Træk vandtanken ud, og fjern det gamle vandfilter.

2. Forbered og indsæt det nye vand filter. *Se kapitlet "Forberedelse and inserting the water filter"*
3. Tryk på symbolerne [Americano] og [Steam] samtidigt i 3 sekunder.
 - ✓ Apparatet er i indstillingstilstand.
4. To activate the filter reminder, Tryk ].
 - ✓  lyser med 100% lysstyrke.
 - ✓ Apparatet aktiverer den nye water filter.
5. For at gemme indstillingen skal du trykke på symbolerne [Americano] og [Steam] samtidigt i 3 sekunder.

5.2 Turning off the filter reminder

1. Fjern vandtanken.
2. Fjern vandfilteret.
3. Sæt vandtanken tilbage i apparatet.
4. Tryk på symbolerne [Americano] og [Steam] samtidigt i 3 sekunder.
 - ✓ Apparatet er i indstillingstilstand.
 - ✓  blinker.
5. Tryk på  for at slå filterpåmindelsen fra.
 - ✓  lyser med 50 % lysstyrke.
6. For at gemme indstillingen skal du trykke på symbolerne [Americano] og [Steam] samtidigt i 3 sekunder.

- i** Hvis du vil bruge et nyt vandfilter, skal du forberede og indsætte det nye vandfilter og derefter aktivere det som beskrevet.



Se kapitel „Klargøring og isætning af vandfilteret“ Se kapitel „Udskiftning af vandfilteret“






5.3 Indstilling af udsugningstilstand

Du kan indstille standardudsugningstilstanden, når apparatet tændes, i overensstemmelse med dine behov.

- i** Apparatet er som standard i varmebrygningstilstand, når det tændes.
- i** Apparatet skal være klar til brug at bruge.
- Tryk på symbolerne [Americano] og [Steam] samtidigt for 3 sekunder.
 - ✔ Apparatet er i indstillingstilstand.
 - ✔ [Hot Brew] lyser med 100 % lysstyrke, og [Cold Brew] lyser med 50 % lysstyrke.
 - Tryk på [Koldt bryg].
 - ✔ [Koldt bryg] lyser med 100 % lysstyrke, og [Varmt bryg] lyser med 50 % lysstyrke.
 - ✔ Apparatet er som standard indstillet til koldbrygning, når det tændes.
 - For at gemme indstillingen skal du trykke på symbolerne [Americano] og [Steam] samtidigt i 3 sekunder.
 - ✔ Apparatet gemmer indstillingen og går tilbage til hovedmenuen.
 - i** Efter 30 sekunder uden brugerinteraktion gemmer apparaterne indstillingen og går automatisk tilbage til hovedmenuen.
 - i** Du kan skifte til standardtilstanden for varm brygning efter indstilling i henhold til dine behov.

5.4 INDSTILLING AF STANDBY-TID

1. Tryk på symbolerne [Espresso] og [Americano] samtidigt i 3 sekunder. [Espresso], [Americano] og [] lyser op. Tryk gentagne gange på [], indtil 2. kontrolpanelet viser den ønskede standbytid. Tilgængelige standby-indstillinger:

| Symbol | Standby time |
|---|--------------|
|  | 15 min |
|  | 30 min |
|  | 1 h |
|  | 2 h |
|  | 3 h |

- For at gemme indstillingen skal du trykke på symbolerne [Espresso] og [Americano] samtidigt i 3 sekunder.
 - ✔ Apparatet gemmer indstillingen og går tilbage til hovedmenuen.
 - i** Efter 30 sekunder uden brugerinteraktion gemmer apparatet indstillingen og går automatisk tilbage til hovedmenuen.

6 RENGØRING OG VEDLIGEHOLDELSE

For at få dit apparat til at fungere effektivt i lang tid er det vigtigt at rengøre og vedligeholde det omhyggeligt.

6.1 OVERSIGT OVER RENGØRING

ⓘ OPMÆRKSOMHED

Forkert rengøring i opvaskemaskinen kan beskadige komponenterne.

- ▶ Følg brugervejledningen til opvaskemaskinen.
- ▶ Brug kun rengøringsprogrammer under 60 °C/140 °F.
- ▶ Rengør kun egnede.

| Komponent | OPVASKEMASKINE |
|----------------------------|----------------|
| Apparat | ✗ |
| Drypvandsbakke | ✓ |
| Drypplade | ✓ |
| Drikkevaredispenser er | ✓ |
| Dampdyse | ✓ |
| Låg til bønnebeholder | ✗ |
| Vandtank | ✗ |
| Bryggeenhed | ✗ |
| Beholder til kaffegrums | ✓ |
| "Drypbakke fuld"-indikator | ✓ |
| Dæksel til drikkevareudløb | ✗ |

6.2 RÅD OM RENGØRING

ⓘ OPMÆRKSOMHED

Uegnede rengøringsprodukter kan beskadige apparatets overflader.

- ▶ Brug ikke slibende svampe.
- ▶ Brug ikke skrappe eller slibende rengøringsmidler.
- ▶ Brug ikke rengøringsmidler, der indeholder alkohol.
- ▶ Læs altid etiketten for at kontrollere, om dit rengøringsmiddel eller din skuresvamp er egnet.

ⓘ OPMÆRKSOMHED

Uegnede rengørings- og afkalkningsmidler kan beskadige apparatet.

- ▶ Brug ikke ren citronsyre, eddike eller andre eddikebaserede midler til at afkalke apparatet.
- ▶ Læs altid etiketten for at kontrollere, om dit rengørings- eller afkalkningsmiddel er egnet.

6.3 RENGØRING AF APPARATET

⚠ Advarsel - risiko for elektrisk stød

Indtrængende fugt kan føre til elektrisk stød.

- ▶ Beskyt apparatet mod ekstrem varme, fugt og vandsprøjt.
- ▶ Brug aldrig en damprenser til rengøring.
- ▶ Nedsænk aldrig apparatet, netstikket eller netledningen i vand.
- ▶ Afbryd apparatet fra strømforsyningen, før du udfører rengørings- eller vedligeholdelsesarbejde.

Advarsel - risiko for skoldning

Nogle dele af apparatet bliver varme under drift.


⦿ Rør ikke ved nogen dele af apparatet, før du lader dem køle af.

1. Rengør overfladerne med en mikrofiberklud.
2. Rengør kaffebønnebeholderen med en fugtig klud.


63.1 RENGØRING AF DRYPBAKKE OG KAFFEGRUMSBEHOLDER

Tøm drypbakken dagligt, eller så snart flyderen er synlig.


1. Fjern drypbakken.

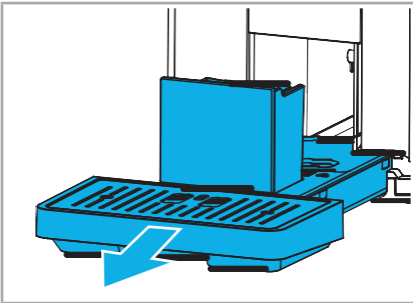

2. Tøm drypbakken og kaffegrumsbeholderen.
3. Rengør apparatets inderside med en blød klud.

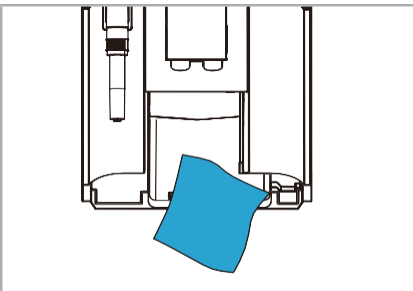

4. Rengør alle komponenter.

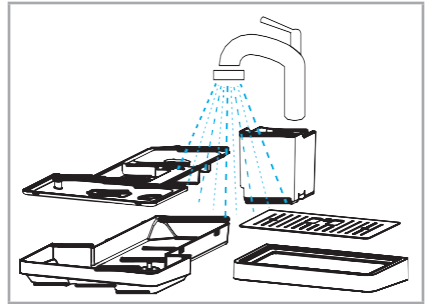


5. Sæt komponenterne ind i apparatet.
- ⓘ Du kan rengøre drypbakken og kaffegrumsbeholderen i opvaskemaskinen.


63.2 RENGØRING AF BRYGGEENHEDEN

Ud over den automatiske skylning skal bryggeenheden tages ud en gang om ugen for at blive rengjort.


1. Afbryd apparatet fra strømforsyningen.
2. Træk vandtanken ud i håndtaget.
3. Åbn servicedøren.

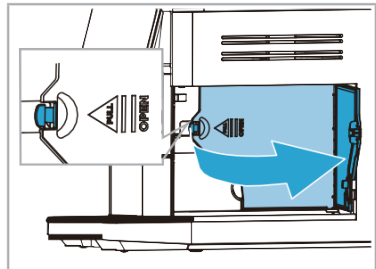


4. Tryk den orange låsemekanisme til højre for at låse bryggeenheden op.

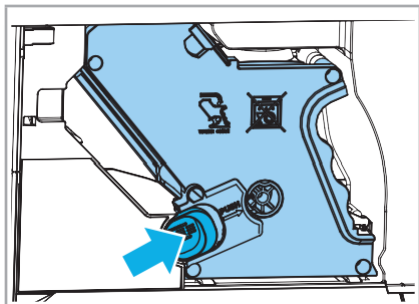


5. Fjern bryggeenheden.

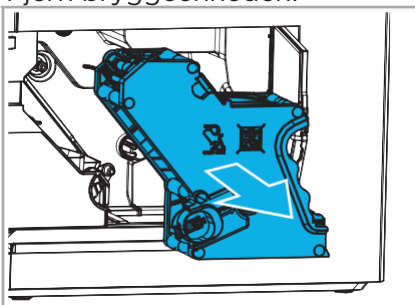

6. Rengør bryggeenheden under rindende vand.

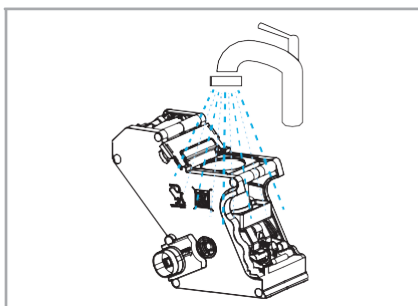

7. Rengør indersiden af bryggekammeret med en fugtig klud.

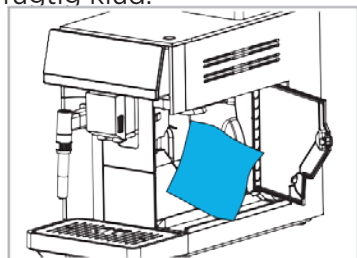


8. Lad bryggeenheden og apparatets inderside tørre.
9. Sæt bryggeenheden ind i bryggekammeret.
10. Luk servicedøren.
11. Sæt vandtanken ind i apparatet.

633 RENGØRING AF DAMPDYSEN


Rengør dampdysen efter brug for at undgå ophobning af mælkerester og blokeringer.

ADVARSEL - RISIKO FOR FORBRÆNDINGER

Dampdysen bliver meget varm under tilberedningen.

 Rør ikke ved dampdysen, før du har ladet dem køle af.

1. Tryk på [Steam] og giv lidt damp i et par sekunder for at tømme den mælk, der er tilbage i dampdysen.
2. Tryk på [Steam] for at stoppe damptilførslen.
3. Vent et par minutter på, at dampdysen køler af.
4. Fjern dampdysen.
5. Rengør dampdysen under rindende vand.

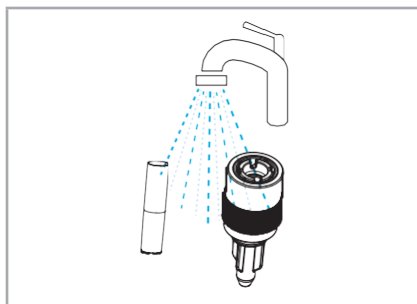


6. Tør dampdysen grundigt.
7. Sæt dampdysen ind i dampdyseholdere.


6.34 RENGØRING AF DRIKKEVAREAUTOMATEN

 **Advarsel - risiko for skoldning.**


Drikkevareautomaten bliver meget varm under drift.

 Rør ikke ved nogen dele af apparatet, før du lader det dem til at køle ned.


1. Fjern dækslet til drikkevareudløbet.

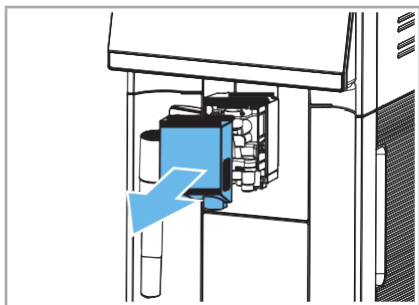


2. Åbn metalbeslaget, og fjern drikkevareautomaten.

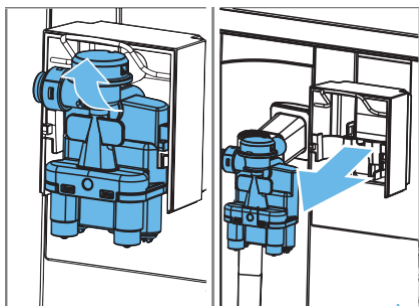


3. Afmonter drikkevareautomaten.

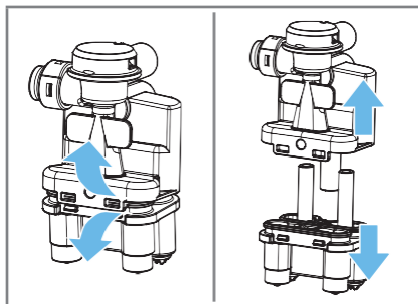

4. Rengør drikkevareautomaten under rindende vand.

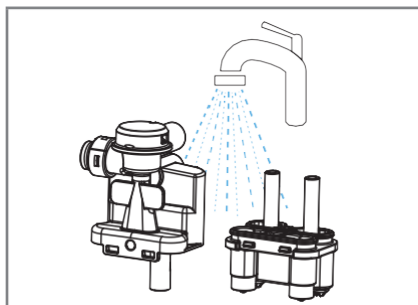


5. Tør drikkevareautomaten af grundigt.
6. Saml de enkelte dele igen.
7. Sæt drikkevaredispenseren ind i drikkevaredispenserholderen.
8. Luk metalbeslaget.
9. Sæt dækslet til drikkevareudløbet på drikkevareudløbet.

 Du kan rengøre drikkevareautomaten i opvaskemaskinen.


6.35 Rengøring af skakten til formalet kaffe

Skakten til formalet kaffe skal rengøres hver 3.-5. dag.

1. Fjern skakten til færdigmalet kaffe.
2. Rengør skakten til formalet kaffe under rindende vand.

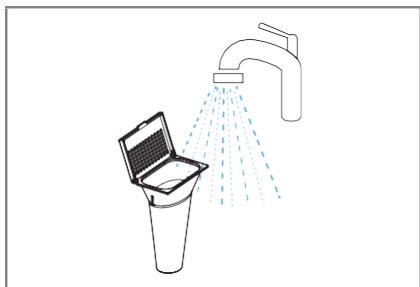

3. Træk vandtanken ud, og fjern bryggeenheden.
4. Brug rengøringsbørsten til at fjerne det formalede kaffepulver, der er tilbage i kammeret.

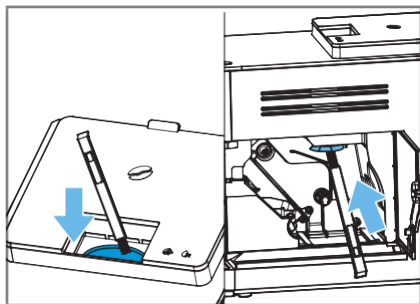

5. Rengør indersiden af bryggekommeret med en fugtig klud.
6. Sæt bryggeenheden ind i bryggekommeret.
7. Luk servicedøren.
8. Sæt vandtanken ind i apparatet.
9. Tør den færdigmaledede kaffeskakt grundigt.
10. Sæt skakten til formalet kaffe ind i skaktkammeret til formalet kaffe.

6.4 SERVICEPROGRAMMER

Din enhed har forskellige serviceprogrammer.

⚠ OPMÆRKSOMHED

Forkert afkalkning eller forsinkelse kan beskadige apparatet.

- ▶ Udfør straks afkalkningsprogrammet i overensstemmelse med instruktionerne.
- ❗ Hvis apparatet ikke afkalkes i god tid, vil det blive låst, og [] lyser op.
- ❗ Hvis dit apparat er blevet låst, kan du først bruge det igen, når afkalkningsprogrammet er blevet udført.

BRUG AF PROGRAMMER

| | |
|--------------------|--|
| Rengøring af kaffe | Rengøring af apparatet med en rengøringstablet |
| Afkalkning | Afkalkning af apparat med afkalkningsmiddel |


6.4.1 BRUG AF KAFFERENSNINGSPROGRAMMET

Programmet varer ca. 20 minutter.


- ❗ [] lyser med 50% lysstyrke.

1. For at starte kafferensningsprogrammet skal du trykke på [] i 3 sekunder.

- ✓ [Clean] lyser med 100% lysstyrke.
 - ✓ Kafferensningsprogrammet starter.
 - ✓ [Clean] blinker.
2. Fjern og tøm drypbakken og kaffegrumsbeholderen.
 3. Sæt drypbakken og kaffegrumsbeholderen i.
 - ✓ [Clean] blinker.
 4. Tag vandtanken ud, og fyld den med lunkent vand op til MAX-mærket.
 5. Sæt vandtanken på plads.
 6. Placer en beholder med en kapacitet på mindst 1,5 liter under drikkevareudløbet.

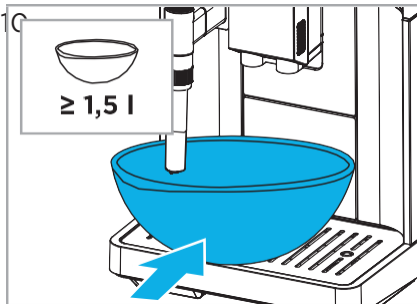

9. Læg en rengørings-tablet i Skakt til færdigmalet kaffe.

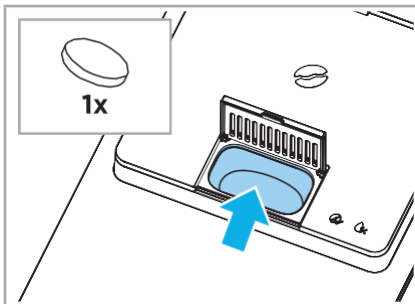

10. Tryk på [Clean] for at genoptage kafferensningsprogrammet.
- ✓ Når kafferensningsprogrammet er færdigt, vender apparatet tilbage til hovedmenuen.
11. Fjern og tøm beholderen.
12. Fjern og tøm vandtanken.
13. Fyld vandtanken med koldt, frisk drikkevand uden kulsyre, og sæt den i igen.


642 BRUG AF AFKALKNINGSPROGRAMMET



Programmet varer ca. 40 minutter.

- ❗ [Calc] lyser op.

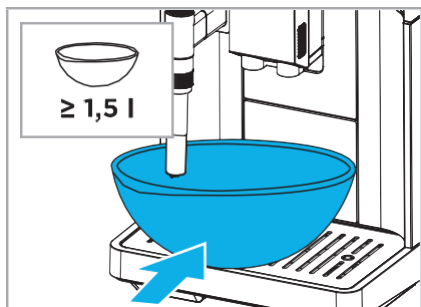

- 1 For at starte afkalkningsprogrammet skal du trykke på [Calc] i 3 sek.
- ✓ Afkalkningsprogrammet starter.
- ✓ [Clean] blinker.
- 2 Fjern og tøm drypbakken og kaffegrumsbeholderen.
- 3 Sæt drypbakken og kaffegrumsbeholderen i.
- ✓ [Clean] blinker.
4. Fjern vandtanken, og tøm den.
5. Fjern vandfilteret, hvis du bruger et.

6. Fyld vandtanken med lunkent vand op til 1L-mærket.
7. Fyld afkalkningsmidlet i vandtanken i henhold til anvisningerne på emballagen.
8. Sæt vandtanken på plads.
9. Placer en beholder med en kapacitet på mindst 1,5 liter under drikkevareudløbet. **!**
17. Fjern og tøm drypbakken.
18. Sæt drypbakken og kaffegrumsbeholderen i.
- ✓ Når afkalkningsprogrammet er færdigt, vender apparatet tilbage til hovedmenuen.
- !** Fjern ikke beholderen under dispensereren under afkalkningsprocessen.






 


11. Tryk på [] for at genoptage afkalkningsprogrammet.
12. Når [] blinker, er den tom, og skyl vandtanken grundigt.
13. Sæt vandfilteret i vandtanken, hvis du bruger en. Dimensioner (H x B x D)







Maksimalt statisk pumpetryk

14. Fyld vandtanken med koldt vand, friske, ikke-kulsyreholdige drikke vand op til MAX-mærket, og sæt den i igen.
15. Tryk på [] for at genoptage afkalkningsprogrammet.
- ✓ [] blinker.
16. Fjern og tøm beholderen.

8 Fejlfinding

Betjening af dit apparat kan føre til fejl og funktionsfejl. De følgende tabeller indeholder mulige årsager og anvisninger til løsning af en fejlmeddelelse eller funktionsfejl. Det anbefales at læse nedenstående tabeller omhyggeligt for at spare tid og penge, som det kan koste at ringe til servicecentret.

| Problemer | Mulige årsager | Løsning |
|---|--|--|
| [] blinker. | Vandtanken er næsten tom. | <ul style="list-style-type: none"> ▶ Fyld vandtanken med frisk drikkevand uden kulsyre op til MAX-mærket. <i>Se kapitlet "Kontrol af vandets hårdhed"</i> |
| [] lyser op. | Vandtanken er ikke indsat korrekt. | <ul style="list-style-type: none"> ▶ Sæt vandtanken korrekt på plads. |
| [] blinker. | Kaffegrumsbeholderen er fuld. | <ol style="list-style-type: none"> 1. Tøm beholderen til kaffegrums. 2. Vent mindst 5 sekunder. 3. Sæt kaffegrumsbeholderen i igen. |
| [] lyser op. | Kaffegrumsbeholderen er ikke sat korrekt i. | <ul style="list-style-type: none"> ▶ Sæt kaffegrumsbeholderen korrekt i. |
| [] blinker hvidt. | Der blev brugt for meget eller for lidt kaffe. | <ul style="list-style-type: none"> ▶ Rengør bryggeenheden. <i>Se kapitlet "Rengøring af bryggeenheden"</i> |
| [] lyser hvidt. | Bryggeenheden er ikke sat korrekt i. | <ul style="list-style-type: none"> ▶ Sæt bryggeenheden korrekt i. <i>Se kapitlet "Rengøring af bryggeenheden"</i> |


| Problem | Mulige årsager | Løsning |
|---|--|---|
| [] blinker. | Apparatet skal afkalkes. | Brug afkalkningsprogrammet. <i>Se kapitel "Brug af afkalkningsprogrammet"</i> |
| [] blinker. | Vandfilteret skal udskiftes. | Udskift vandfilteret. <i>Se kapitlet "Udskiftning af vandfilter".</i> |
| [] blinker. | Kaffebønnen beholderen er næsten tom. | Fyld kaffebønnen op igen beholder. <i>Se kapitel "Fyldning af kaffebønnebeholderen"</i> |
| [] blinker i rød, og drikkevaresymbol lyser op. | Apparatet har en fejl. | Tag stikket ud af stikkontakten fra stikkontakten og kontakt kundeservice. Fjern vandtanken, og |
| [] fortsætter med at blinke, selv om vandstanden er over minimumsmængden. | Flyderen sidder fast i vandtanken. Der er luft i vandfilteret. | rengør den grundigt. Dyp vandfilteret i vand, indtil der ikke længere slipper luftbobler ud, og udskift derefter vandfilteret. <i>Se kapitlet "Udskiftning af vandfilteret"</i> |
| Apparatet reagerer ikke længere. | Apparatet har en fejl. | 1. Træk netstikket ud, og vent 1 minut. 2. Sæt netstikket i igen. 3. Tryk på [Tænd/sluk-knap]. |
| [ :] fortsætter med at blinke, selv om kaffegrumsbeholderen er tom. | Hvis apparatet er slukket, så er tømningen af kaffegrumsbeholderen ikke registreret. | i Tøm altid beholderen kaffegrumsbeholderen, mens apparatet er tændt. 1. Fjern den tomme kaffegrumsbeholder, og vent i 5 sekunder. 2. Sæt kaffegrumsbeholderen i igen. |

| Problemer | Mulige årsager | Løsning |
|--|--|--|
| Kaffegrumsbeholderen er fuld, men [☹️] blinker ikke. | Drypbakken blev fjernet i mere end 5 sekunder, uden at kaffegrumsbeholderen blev tømt. | <ol style="list-style-type: none"> Tøm kaffegrumsbeholderen, når du fjerner drypbakken, også selv om den kun indeholder et par kaffepuder. <ul style="list-style-type: none"> ☑️ Kaffegrums-tælleren nulstilles til 0 og begynder at tælle |
| Kaffen bliver ikke serveret eller kun drypvis. | Drikkevaredispenseren eller holderen til drikkevaredispenseren er blokeret. | <ul style="list-style-type: none"> ▶️ kaffepuckene korrekt igen. <p>Rengør drikkevareautomaten manuelt. <i>Se kapitlet "Rengøring af drikkevareautomaten"</i></p> |
| | Slibeniveauet er indstillet for fint. | <ul style="list-style-type: none"> ▶️ Juster kværnen til en grovere formalingsgrad. <i>Se kapitlet "Indstilling af formalingsgrad"</i> |
| | Bryggeenheden er beskidt. | <ul style="list-style-type: none"> ▶️ Rengør <i>Se kapitlet "Rengøring af bryggeenheden"</i> |
| | Der er luft i vandfilteret. | <ul style="list-style-type: none"> ▶️ Dyp vandfilteret i vand, indtil der ikke længere slipper luftbobler ud, og udskift derefter vandfilteret. <i>Se kapitlet "Udskiftning af vandfilteret"</i> |
| | Ophobning af kalk i apparatet. | <ul style="list-style-type: none"> ▶️ Brug afkalkningsprogrammet. <i>Se kapitlet "Brug af afkalkningsprogrammet"</i> |

| Problem | Mulige årsager | Løsning |
|--|---|---|
| Der løber ikke kaffe ud af den ene eller begge tude. | Drikkevareau tomaten er blokeret. | ▶ Rengør drikkevareautomaten manuelt. <i>Se kapitlet "Rengøring af drikkevareautomaten"</i> |
| Ved udlevering drikken, væsken flygter fra drikkevareautomat og sprøjter ud over det hele Drikken Dispenser. | Den nederste del af drikkevareautomat er ikke korrekt samlet. | ▶ Sæt drikken sammen dispenserens korrekt. <i>Se kapitlet "Rengøring af drikkevareautomat"</i> |
| Kaffens kvalitet varierer meget. Den indstillede mængde er ikke nået. | Ophobning af kalk | ▶ Brug afkalkningsfunktionen program. <i>Se kapitlet "Brug af afkalkningsprogrammet"</i> |
| Der er ikke noget mælkeskum dannet, når Skummende mælk. | Ringens af dampdysen drejer til '  ' position. | ▶ Drej ringen til position. |
| Dampdysen er snavset. | | ▶ Rengør dampdysen manuelt. <i>Se kapitlet "Rengøring af dampdysen"</i> |
| Dampdysen er ikke monteret korrekt. | | ▶ Kontroller monteringen af dampdysen. <i>Se kapitlet "Rengøring af dampdysen"</i> |
| Dampdysen er blokeret. | | ▶ Rengør dampdysen manuelt. <i>Se kapitlet "Rengøring af dampdysen"</i> |
| Den anvendte mælketype er ikke egnet til at lave mælkeskum. | | ▶ Brug ikke mælk, der allerede er kogt. ▶ Brug kold mælk med et fedtindhold på mindst 1,5 %. Brug afkalkningsprogrammet. <i>Se kapitlet "Brug af afkalkningsprogrammet"</i> |

| Problem | Mulige årsager | Løsning |
|--|---|---|
| Kaffen har ingen "crema" eller er for svag. | Kaffebønnerne er uegnet. | <ul style="list-style-type: none"> ▶ Brug kaffebønner velegnet til espresso maskiner. ▶ Brug en type kaffe med en højere andel af robusta-bønner. |
| | Kaffebønnerne er ikke længere frisk. | ▶ Brug friske kaffebønner. |
| | Slibeniveauet er indstillet for groft. | <ul style="list-style-type: none"> ▶ Juster kværnen til en finere formalingsgrad. <i>Se kapitlet "Indstilling af slibegrad"</i> |
| Kaffen er ikke varm nok. | Kaffens styrke er indstillet for lavt. | ▶ Indstil kaffestyrken til en højere værdi. <i>Se kapitlet "Indstilling af kaffestyrke"</i> |
| | Kaffen temperaturen er indstillet for lav. | ▶ Sæt kaffen på plads temperatur til en højere værdi. <i>Se kapitlet "Justering af kaffens temperatur"</i> |
| Den malede kaffe blokerer kaffepulverskaktene. | Koppen er kold. | <ul style="list-style-type: none"> ▶ Sådan forvarmer du kopperne, Skyl dem med varmt vand ▶ vand. |
| | Kaffepulveret skakten er fugtig. Den malede kaffe er komprimeret for meget. | <ul style="list-style-type: none"> ▶ Fjern kaffen Pulverskakt, rengør ▶ Tryk ikke den malede kaffe for hårdt ned i måleskeen. |

| Problem | Mulige årsager | Løsning |
|--|--|--|
| Kaffegrumset er ikke kompakt og er for vådt. | Kværnindstillingen er for fin eller for grov, eller der er ikke brugt nok malet kaffe. | <ul style="list-style-type: none"> ▶ Juster formalingsgraden til en finere eller grovere indstilling. <i>Se kapitlet "Indstilling af formalingsgrad"</i> ▶ Brug en hel måleske |
| Vandfilteret bliver ikke siddende på plads i vandtanken. | Der bruges et forkert vandfilter. | <ul style="list-style-type: none"> ▶ malet kaffe. Brug kun originale reservedele. <i>Se kapitlet "Tilbehør"</i> |
| | Gummiringen på vandfilteret er ikke på plads. | <ul style="list-style-type: none"> ▶ Sæt gummiringen tilbage på vandfilteret. |
| Servicedøren lukker ikke ordentligt. | Bryggeenheden er ikke sat korrekt i. | <ul style="list-style-type: none"> ▶ Sæt bryggeenheden korrekt i. <i>Se kapitel "Rengøring af bryggeenheden"</i> |
| | Der er for meget malet kaffe i bryggekommeret. | <ul style="list-style-type: none"> ▶ Rengør damptilførslen efter 3 minutter. |
| Kværnindstillingen er svær at justere. | Der er for mange bønner i kværnen. | <ul style="list-style-type: none"> ▶ Udskænk en drik lavet af kaffebønner. ▶ Juster kun slibegraden en smule. |
| Apparatet ser ud til at være utæt. | Drypbakken er for fuld og løber over. | <ul style="list-style-type: none"> ▶ Tøm drypbakken dagligt, eller så snart flyderen er synlig. |
| | Vandtanken er ikke sat korrekt i. | <ul style="list-style-type: none"> ▶ Sørg for, at vandtanken er sat korrekt i. |
| | Apparatet er ikke placeret på en plan overflade. | <ul style="list-style-type: none"> ▶ Placer apparatet på en vandtæt, plan og tilstrækkelig stabil overflade. <i>Se kapitlet "Opstilling af apparatet"</i> |
| Damplevering en stopper. | En sikkerhedsanordning stopper | <ul style="list-style-type: none"> ▶ Vent, og aktiver derefter dampfunktionen igen. |

| Problem | Mulige årsager | Løsning |
|--|--|---|
| Apparatet går pludselig tilbage til hovedmenuen. | Apparatet er for varmt. | ▶ Sluk for apparatet i 30 minutter. |
| Drikkevaresymbolerne tændes pludseligt og slukkes langsomt efter hinanden, mens drikken tilberedes. | Drypbakken eller vandtanken blev fjernet under tilberedningen. | <p>❗ Fjern ikke drypbakken eller vandtanken, mens drikken tilberedes.</p> <ol style="list-style-type: none"> 1. Sæt drypbakken og vandtanken tilbage i apparatet. 2. Vent, indtil apparatet vender tilbage til hovedmenuen. |
| Meget hyppig visning af, at afkalkning er nødvendig. | Indstillingen af vandets hårdhed er for hård. | ▶ Sæt vandfilteret i, og indstil vandets hårdhed som beskrevet. <i>Se kapitel "Kontrol af vandets hårdhed"</i> |
| Apparatet laver usædvanligt høje lyde. | Der er luft i vandfilteret. | <p>▶ Dyp vandfilteret i vand, indtil der ikke længere slipper luftbobler ud, og udskift derefter vandfilteret. <i>Se kapitlet "Udskiftning af vandfilteret"</i></p> <p>▶ Sørg for, at vandtanken er sat korrekt i.</p> |
| Kaffebønnebeholderen er tom, men [] blinkede ikke. | <p>Vandtanken er ikke sat korrekt i.</p> <p>Olien fra kaffebønnerne har tilsmudset detektionsvinduet i kaffebønnebeholderen.</p> | ▶ Brug rengøringsbørsten til at rengøre vinduet til registrering af kaffebønnebeholderen regelmæssigt. |

| Problem | Mulige årsager | Løsning |
|---|--|---|
| Kaffebønnebeholderen indeholder stadig bønner, men [☞] blinker. | Kaffebønnerne falder ikke ned i kværnen. | ▶ Brug rengøringsbørsten til at smide kaffebønnerne ned i kværnen. |
| Apparatet udskænkede kaffevæske under den automatiske skyllecyklus. | Malet kaffe blev tilsat, før apparatet blev tændt. Malet kaffe faldt ind i bryggeenheden. | ▶ Fyld kun malet kaffe på, når apparatet er tændt. ▶ Rengør <i>Se kapitlet "Rengøring af bryggeenheden"</i> |

ENGLISH

III

1 SAFETY AND SECURITY

Your safety is important to us. Please read this information before using your device. Strictly follow the instructions in this user manual. We accept no responsibility for any problems, damage or fires caused by failure to follow the instructions in this user manual.

This user manual must be kept where it can be consulted at all times. If it is sold, transferred or moved, it must accompany the product.

The product may have different aesthetic characteristics compared to the illustrations in this user guide, but the operation, maintenance and installation instructions are the same.

1.1 INTENDED USE

The following safety guidelines are intended to prevent unforeseen risks or injuries resulting from unsafe or incorrect operation of the device. Check the packaging and the device upon arrival to ensure that everything is intact to guarantee safe operation. Do not use the device if you find any damage. Please contact your dealer. Please note that modifications or changes to the device are not permitted for your safety. Unintended use may result in hazards and loss of warranty claims.









The appliance is intended for private domestic use only for the preparation of hot drinks. Only use the device in enclosed spaces below an altitude of 2000 metres above sea level. Any other use is not permitted.

Children or persons with a disability that limits their mobility must be instructed in the use of the device by a responsible and competent person. The responsible person must ensure that the device can be used safely.

Do not allow children to play with the device. Keep children under 8 years of age away from the device if they are not supervised. Cleaning and user maintenance should only be carried out by supervised children.

Only fill the water tank with cold, fresh, non-carbonated drinking water.

1.2 EXPLANATION OF SYMBOLS

| SYMBOL | MEANING OF THE SYMBOL |
|---|---|
|  | Risk of electric shock This symbol indicates that there is a danger to life and health due to voltage. |
|  | WARNING The signal word indicates a hazard with a medium level of risk which, if not avoided, could lead to death or serious injury. |
|  | CAUTION The signal word indicates a hazard with a low degree of risk which, if not avoided, could result in minor or moderate injury. |
|  | ATTENTION The signal word indicates important information (e.g. property damage), but not danger. |
|  | This symbol indicates a single, unnumbered instruction step. |
|  | This symbol indicates the result of one or more previous instruction steps. |
|  | This symbol indicates a hint or tip. |
|  | Dashed borders on images mean that the steps are optional. |

1.3 SAFETY INSTRUCTIONS


WARNING - Risk of injury to health

A dirty appliance can pose a health risk.

- ▶ Follow the cleaning instructions for the device.
- ▶ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid danger.
- ▶ Do not immerse the appliance.
- ▶ **WARNING:** Do not use the device if the surface is cracked.
- ▶ The surface of the heating element is exposed to residual heat after use.
- ▶ Do not use outdoors.
- ▶ The device is intended for use in the household and similar applications such as
 - staff kitchen areas in shops, offices and other work environments;
 - Farmhouses;
 - of customers in hotels, motels and other residential areas;
 - Bed and breakfast environments.
- ▶ The coffee machine must not be placed in a cabinet when in use
- ▶ This appliance may be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been supervised or instructed in the safe use of the appliance and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance shall not be carried out by children unless they are older than 8 years and under supervision. Keep the device and its cord out of reach of children under 8 years of age.
- ▶ **WARNING:** Improper use may result in personal injury. **WARNING:** Do not spill on the plug.
- ▶ Product information on power consumption and time to reach the relevant low power mode: Off mode: 0.5W; The maximum time to reach the applicable low power mode:
30 minutes.


2 PRODUCT OVERVIEW

Overview of the device and its components:

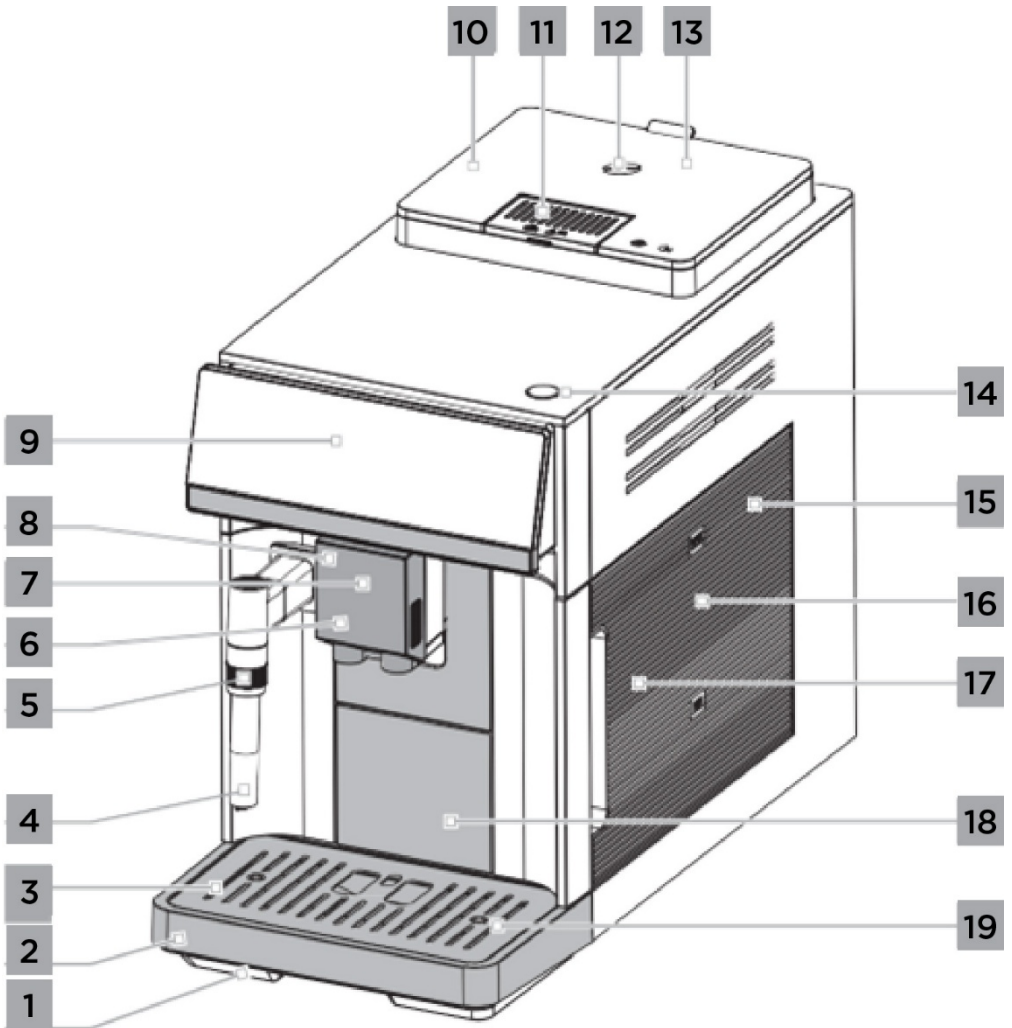


| POS. | COMPONENT | POS. | COMPONENT |
|------|---------------------------------------|------|------------------------------|
| 1 | Drip tray | 18 | Container for coffee grounds |
| 2 | Drip tray cover | 19 | "Drip tray full" indicator |
| 3 | Tray for cups | | |
| 4 | Steam nozzle | | |
| 5 | Ring for milk foam selection | | |
| 6 | Beverage outlet, height adjustable | | |
| 7 | Dispenser for beverages | | |
| 8 | Cover for beverage outlet | | |
| 9 | Control panel | | |
| 10 | Lid for bean container | | |
| 11 | Shaft for ground coffee | | |
| 12 | Container for coffee beans | | |
| 13 | Adjustment wheel for grinding | | |
| 14 | On/Off button | | |
| 15 | Water tank | | |
| 16 | Service door | | |
| 17 | Brewing unit | | |

2.1 SCOPE OF DELIVERY

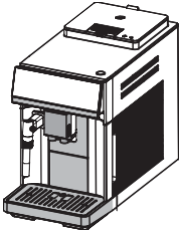

1

 

2



3



4



5



6

Pos. Item

1 Apparatus

2 Cleaning cloth

3 Water filter*

4 Measuring spoon

POS. ITEM

5 Cleaning brush

6 Test strip

* depending on the type
of appliance

2.2 CONTROL PANEL

- i** Make sure that the controls are always clean and dry.
- i** Do not cover the control panel with objects.



| SYMBOL | MEANING OF THE SYMBOL |
|--------|--------------------------------------|
| | The water tank is empty |
| | The coffee grounds container is full |
| | The device has an error |
| | Change the water filter |
| | Cleaning coffee |
| | Decalcify the device |
| | 2-cup dispenser |
| | Adjust the cup volume |

| SYMBOL | MEANING OF THE SYMBOL |
|----------|--|
| | Adjust the coffee strength |
| | Use coffee powder |
| | The container with coffee beans is empty |
| | Hot drinks |
| | Cold drinks |
| | My coffee function |
| | Steam function |
| Heat Up | The appliance heats up |
| CoolDown | The device cools down |

3 BEFORE FIRST USE

Clean the device and its components. Prepare the device for use.

- ❗ See also the included quick start guide.

3.1 SET UP THE DEVICE

⚠ ATTENTION!

Incorrect initial setup can damage the device.

- ▶ Only use the device in a frost-free room.
- ▶ If the device has been transported or stored at temperatures below 0°C, wait 3 hours at room temperature before using it.

1. Place the device on a waterproof, even and sufficiently stable surface.
2. Make sure that the ventilation openings of the appliance are not covered.
3. Remove any protective films and stickers.


3.2 CONNECT THE DEVICE

- ▶ Plug the mains plug of the device into a power outlet near the device.

3.3 FILLING THE WATER TANK

- ❗ If you're using the water tank for the first time, rinse it out first.


1. Pull the water tank out by the handle and remove the lid.

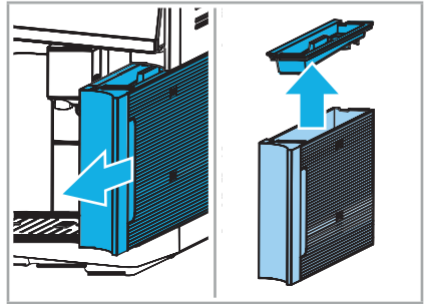

2. Fill the water tank with cold, fresh, non-carbonated drinking water up to the MAX mark.



- ❗ If you pull the water tank halfway out, you can fill the water tank through the inlet.

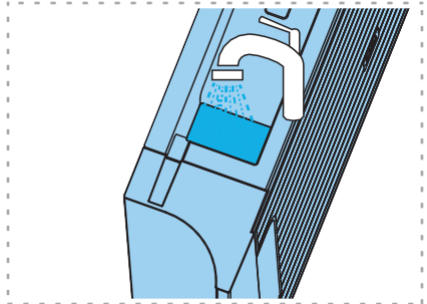


3.4 FILLING THE COFFEE BEAN HOPPER

⚠ ATTENTION

Improper use can damage the grinder.

- ▶ Only use roasted coffee beans.
- ▶ Do not use coffee beans that have been treated with additives or caramelised.
- ▶ Do not add coffee powder to the coffee bean container.
- ▶ Do not pour any liquid into the coffee bean container.

1. Open the lid of the bean hopper.

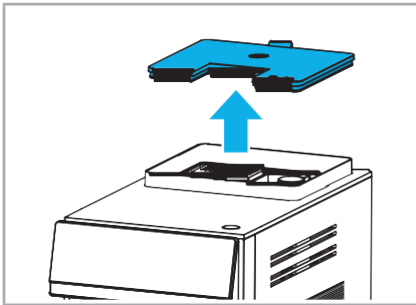

2. Fill the coffee beans into the bean hopper.



3. Close the lid of the bean container.

- ⓘ The control panel displays [☞] when the coffee bean container needs refilling.

3.5 WATER FILTER

A water filter minimises limescale deposits, reduces impurities in the water and improves the flavour of the coffee drink.

⚠ ATTENTION


Lime deposits can damage the appliance.

- ▶ Change the water filter after 2 months at the latest.
- ▶ Pay attention to the symbols on the control panel.
- ⓘ Also change the water filter for hygienic reasons.


3.4.1 PREPARING AND INSERTING THE WATER FILTER

- ⓘ You can also use the device without a water filter.
 - ⓘ Before activating the water filter, it must first be prepared.
1. Shake the water filter for about 5 seconds.
 2. Take the water filter out of the packaging and turn the date indicator to the next 2 months.
 3. Lower the water filter into a container of water.

- Shake the water filter in 10 seconds until no more water bubbles escape.

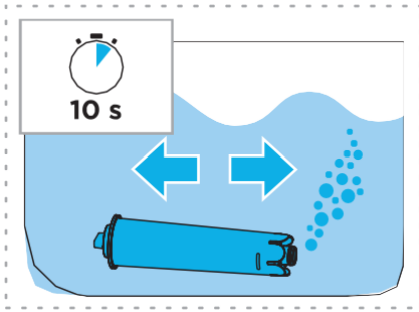

- Press the water filter firmly straight down into the water tank connection.

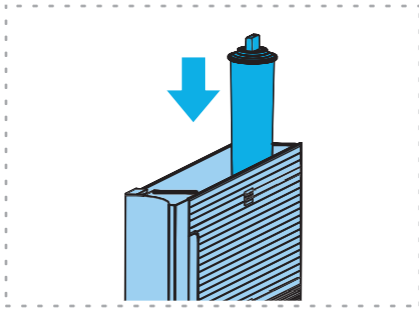


- Put the water tank back in the appliance.

3.5 CHECKING THE HARDNESS OF THE WATER


- i** It is important to set the water hardness correctly.
- i** Use cold, fresh, non-carbonated drinking water.
 - i** You can ask your local
 - i** water supply about the local water.

hardness or check it with the included test strip.

- Dip the test strip briefly in a glass of water for 2 seconds.

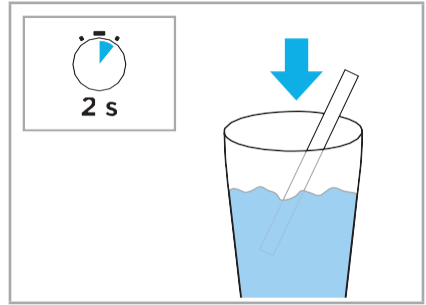

- Let the test strip dry for 10 seconds.
- Check the water hardness by looking at the discolouration of the test strip.

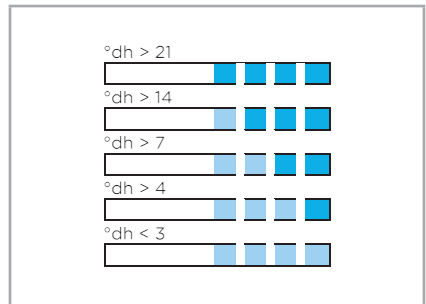


3.6 INITIAL SETTINGS

- Tap [Symbol on/off].
 - [Americano], [Vapour],
 - [☑], [☑], [☑], [☑], [Hot Brew
 - lights at 100% brightness, [Cold
 - Brew] and [☑] lights at 50%
 - brightness.
- To set, press the corresponding symbol repeatedly until the control

panel shows the desired setting.

See chapter "Setting the coffee temperature",
See chapter "Setting the water hardness"

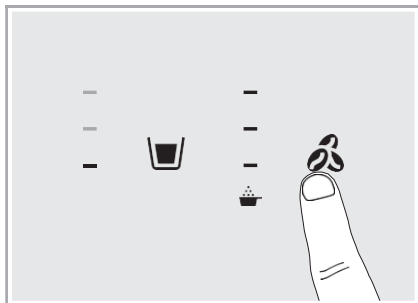

- To save the setting, press the [Americano] and [Steam] symbols simultaneously for 3 seconds.

✔ The device saves the setting and runs a rinse cycle.

3.6.1 SETTING THE COFFEE TEMPERATURE

- Press [] repeatedly until the control panel displays the desired coffee temperature.

❗ Available coffee temperatures:

| LED DISPLAY | Temperature |
|-------------|-------------|
| | normal |
| | high |
| | max |

3.6.2 SETTING THE WATER HARDNESS

- Check the hardness of the water based on the discolouration of the test strip.

See chapter "Checking the water

- Press [] repeatedly until the control panel shows the desired water hardness level.

❗ The table shows the assignment of levels 1 (soft) to 5 (very hard) to the different degrees of water hardness:

| Symbol | Level | °dh |
|--------|-------|------|
| | 1 | < 3 |
| | 2 | > 4 |
| | 3 | > 7 |
| | 4 | > 14 |
| | 5* | > 21 |

* Factory setting

3.6.3 SETTING THE FILTER REMINDER

❗ All new water filters must be activated first.


❗ If you are not using a water filter, you do not need to activate the filter reminder.

❗ [] lights up with 50% brightness.

- Tap [] to activate the filter reminder.

✔ [] lights up at 100% brightness.

- To save the setting, press the [Americano] and [Steam] symbols simultaneously in 3 seconds.


- ✔ The device saves the settings.
- ✔ When the activation process is complete, switch off [].
- ✔ The appliance starts to heat up and rinses.
- ✔ The device is ready to use.

3.6.4 GENERAL INSTRUCTIONS FOR USE


- i** For technical reasons steam can escape from the device during operation.
- i** During operation, water droplets may form at the ventilation openings and on the lid of the ground coffee shaft.
- i** When using the device for the first time, after a cleaning or descaling programme, or if it has not been used for a longer period of time, the first drink will not have the full aroma and should not be consumed.

4 OPERATION



4.1 SWITCHING ON THE DEVICE

- ▶** Press [] to switch the device on.
- ✔ The appliance starts to heat up and rinses.
- ✔ When all beverage symbols are lit, the device is ready for use.

4.2 SWITCH OFF THE DEVICE

- ▶** How to switch off the device, Tap on [].
- ✔ The appliance rinses and switches off.
- i** The appliance is automatically rinsed and switched off 30 minutes after the last drink has been prepared.


4.3 SETTING THE GRINDING DEGREE

- i** You can set the degree of grinding in half steps from  1 (coarse) to  (fine).
- ▶** To set a fine grinding degree, turn the grinding adjustment wheel to the left.
- ▶** To set a coarse grinding degree, turn the grinding adjustment wheel to the right.




4.4 CUSTOMISATION OF BEVERAGES

Before preparation, you can customise your drink to your taste.


441 SETTING THE FILLING QUANTITY

- ▶ Press [] repeatedly until the control panel displays the desired filling amount.




Available filling quantities:

| LED COLOURS | Number of |
|---|-----------|
|  | small |
|  | Medium |
|  | big |


442 Setting the coffee strength

- ▶ Press [] repeatedly until the control panel displays the desired coffee strength.

▶ Available coffee strengths:

| LEDS | Strengths |
|---|-----------|
|  | mild |
|  | medium |
|  | strong |

 443 PUT MY COFFEE ON HOLD

1. Press [[My Coffee] for 3 seconds. [My Coffee], [] [Hot Brew] lights up at 100% brightness, [Cold Brew] lights up at 50% brightness.
2. Set the coffee strength.


See the chapter "Setting the coffee strength"

- ▶ To set a cold brew drink, press [Cold Brew]. [Cold Brew] lights up with 100%


[Hot Brew] lights up at 50% brightness.

3. Tap [My coffee] and the machine will start preparation.
 4. Press [My Coffee] until the machine makes the cup size you want. The appliance finishes the preparation and saves the settings.
- ✔ The coffee drink is prepared and handed out.
 - ▶ The initial setting of [My coffee] is maximum coffee strength and maximum cup size.

4.5 BEVERAGE PREPARATION

 **Warning - risk of scalding** Hot liquids and vapours can cause scalding.

- ▶ Do not hold any part of your body under the socket.

 **Warning - Risk of burns** Some parts of the device become hot during operation.

- ▶ Do not touch any part of the the device before you let them cool down.
- ▶ Some drinks are prepared in 2 steps.
- ▶ If you want to stop the beverage dispensing prematurely, tap the selected beverage symbol again.
- ▶ The beverage outlet can be adjusted in height.

4.5.1 Preparation of coffee Drink from coffee beans

1. Place a glass or cup under the outlet.


2. Set the filling quantity.
See chapter "Setting the filling quantity"
 3. Set the coffee strength.
See chapter "Setting the coffee strength"
 4. To start preparation, tap the symbol for the coffee drink of your choice.
- ✔ The coffee drink is prepared and handed out.

4.5.2 PREPARING A COFFEE DRINK FROM COFFEE POWDER


⚠ ATTENTION

Incorrect use of coffee powder can damage the device.

- ▶ Only add coffee powder when the device is switched on.
 - ▶ Never add more than a measuring spoon of coffee powder.
 - ❗ The 2-cup preparation function is not available for drinks made from coffee powder.
1. To switch on the device, press [Symbol On/off], *see chapter "Switching on the device"*.
 2. Place a glass or cup under the outlet.
 3. Open the lid of the pre-painted The coffee shaft.

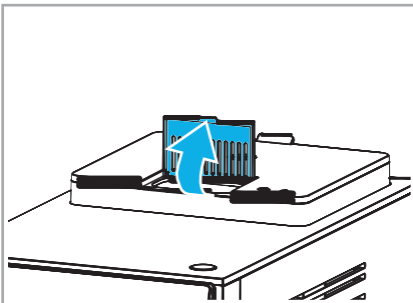

4. Add a maximum of 1 measuring spoon of coffee powder to the ground coffee

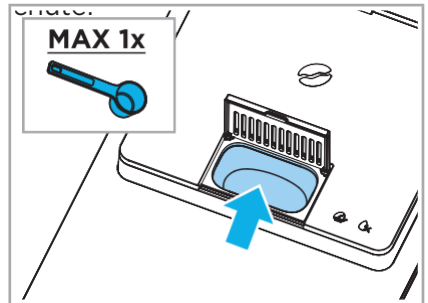

5. Close the lid of the pre-ground coffee chute.
 6. Press [☕] several times until [☕] lights up.
 7. Set the filling quantity.
See chapter "Setting the filling quantity"
 8. To start preparation, tap the symbol for a coffee drink of your choice.
- ✔ The coffee drink made from ground coffee is prepared and dispensed.


4.6 PREPARING DRINKS WITH MILK

⚠ **Warning - risk of burns** The steam nozzle can get very hot.


- ▶ Never touch the steam nozzle while it is hot.
- ▶ Let the steam nozzle cool down before touching it.
- ❗ For best results, use cold milk straight from the fridge.

- i** Stop the steam supply before removing the milk jug with the frothed/heated milk to avoid burns due to splashes of boiling milk.
- i** Do not steam for more than 60 seconds.
- i** Clean the steam nozzle every time you make milk foam. Dried milk residue is difficult to remove.


4.6.1 PREPARING COFFEE WITH MILK

1. Prepare the coffee in a large cup. *See chapter "Preparing drinks"*
 2. Fill the milk jug with the milk you want to froth.
 3. Turn the milk foam selection ring to the " " position.
 4. Lower the steam nozzle into the milk jug, but never lower the black ring.
 5. Press [Steam]. Steam is delivered through the steam nozzle and gives the milk a creamy foam.
 6. Once the desired temperature (ideally 60°C) and foam density is reached, press [Steam] to stop the steam supply.
 7. Pour the milk foam into the previously prepared coffee.
- ✔** The coffee drink with milk is prepared.

4.6.2 PREPARATION OF WARM MILK

1. Fill the milk jug with the milk you want to heat.
 2. Turn the milk foam selection ring to the position "".
 3. Lower the steam nozzle into the milk jug, but never lower the black ring.
 4. Press [Steam]. Steam is emitted through the steam nozzle to heat the milk.
 5. Once the desired temperature is reached (ideally 60°C), press [Steam] to stop the steam supply.
- ✔** The warm milk is ready.

4.7 PREPARATION OF 2 CUPS

- i** This feature is not available for drinks made from coffee powder.
1. Place 2 glasses or cups under the outlet.
 2. Tap [/].
 3. Set the filling quantity. *See chapter "Setting the filling quantity"*
 4. Set the coffee strength. *See chapter "Setting the coffee strength"*
 5. To start, tap the symbol of a beverage of your choice that fits 2 cups.
- i** The beverages are prepared in 2 steps.

you can't

- ✔ 2 cups are prepared and handed out.

4.8 PREPARING A COLD DRINK

- ❗ Cold brew technology differs from traditional espresso brewing. You have to wait a while when you start the preparation.
- 1. Place a glass or cup under the outlet. Add the amount of ice cubes that are in the glass.
- 2. Set the filling quantity. *See chapter "Setting the filling quantity".*
- 3. Set the coffee strength. *See chapter "Setting the coffee strength".*
- 4. Tap [Cold brew] .
- ✔ [Cold Brew], [Espresso], [Coffee], [Americano] lights up.
- 5. To start preparation, tap the symbol for a coffee drink of your choice.
- ❗ The appliance will recommend a cold rinse to optimise the beverage temperature after hot preparations. [Cooling] lights up.
- ✔ The coffee drink is prepared and handed out.
When making hot drinks after cold preparations, the machine will heat up to a higher temperature to reach a suitable temperature for hot drinks. [Heat up] lights up during the heating process.
- ❗ The cold drink preparation function is not available for drinks made from coffee powder.


5 SETTINGS AND PREFERENCES

You can adjust different settings to suit your needs.

5.1 ADJUSTING THE SETTINGS

- ❗ The device must be ready for use.
- 1. Press the [Americano] and [Steam] symbols simultaneously for 3 seconds.
- ✔ The device is in setting mode.
- 2. Adjust the desired setting.
- 3. To save the setting, press the [Americano] and [Steam] symbols simultaneously in 3 seconds.
- ✔ The device saves the setting and returns to the main menu.
- ❗ After 30 seconds without user interaction, the device saves the setting and automatically returns to the main menu.

5.1.1 ADJUSTING THE COFFEE TEMPERATURE


Press [] repeatedly until The control panel displays the desired coffee temperature.
Available coffee temperatures:






| LED | Temperature |
|-----|-------------|
| — | normal |
| — | |
| — | high |
| — | |

LED DISPLAY Temperature

—
— max

5.1.2 ADJUSTING THE WATER HARDNESS

1. Check the water hardness based on the discolouration of the test strip. *See chapter "Checking the water hardness"*
 2. Press [] repeatedly until the control panel shows the desired water hardness level.
- i** The table shows the assignment of levels 1 (soft) to 5 (very hard) to the different degrees of water hardness:



| Symbol | Level | °dh |
|--|-------|------|
|  | 1 | < 3 |
|  | 2 | > 4 |
|  | 3 | > 7 |
|  | 4 | > 14 |
|  | 5* | > 21 |

* Factory setting




5.1.3 REPLACING THE WATER FILTER

i [] Blink.

1. Pull out the water tank and remove the old water filter.

2. Prepare and insert the new water filter. *See the chapter "Preparation and inserting the water filter"*
3. Press the [Americano] and [Steam] symbols simultaneously for 3 seconds.
 - ✔ The device is in setting mode.
4. To activate the filter reminder, Tap on [].
 - ✔ [] lights up at 100% brightness.
 - ✔ The device activates the new water filter.
5. To save the setting, press the [Americano] and [Steam] symbols simultaneously for 3 seconds.

5.2 Turning off the filter reminder

1. remove the water tank.
2. Remove the water filter.
3. Put the water tank back into the appliance.
4. Press the [Americano] and [Steam] symbols simultaneously for 3 seconds.
 - ✔ The device is in setting mode.
 - ✔ [] flashes.
5. Tap [] to switch off the filter reminder.
 - ✔ [] lights up with 50% brightness.
6. To save the setting, tap on the [Americano] and [Steam] symbols simultaneously for 3 seconds.

- i** If you want to use a new water filter, prepare and insert the new water filter and then activate it as described.

See chapter „Preparing and inserting the water filter“

See chapter „Changing the water filter“

5.3 Setting the extraction mode

You can set the default extraction mode when the device is switched on according to your needs.

- i** By default, the appliance is in hot brew mode when switched on.
 - i** The device must be ready for use to use.
1. Tap on the [Americano] symbols and [Steam] simultaneously for 3 seconds.
 - ✔ The device is in setting mode.
 - ✔ [Hot Brew] lights up at 100% brightness and [Cold Brew] lights up at 50% brightness.
 2. Tap on [Cold brew].
 - ✔ [Cold brew] is lit at 100% brightness and [Hot brew] is lit at 50% brightness.
 - ✔ By default, the device is set to cold brew when switched on.
 3. To save the setting, press the [Americano] and [Steam] symbols simultaneously for 3 seconds.
 - ✔ The device saves the setting and returns to the main menu.
 - i** After 30 seconds without user interaction, the devices save the setting and automatically return to the main menu.
 - i** You can switch to the default hot brew mode after setting according to your needs.

3. To save the setting, press the [Espresso] and [Americano] symbols simultaneously for 3

5.4 SETTING THE STANDBY TIME

1. Press the [Espresso] and [Americano] symbols simultaneously for 3 seconds.
- ✔ [Espresso], [Americano] and [☕] will light up.
2. Press [☕] repeatedly until the control panel displays the

Symbol Standby time

1. Press the [Espresso] and [Americano] symbols simultaneously for 3 seconds. [Espresso], [Americano] and [☕] light up. Press [☕] repeatedly until the 2. control panel shows the desired standby time. Available standby settings:

| | |
|---|-----|
| ☕ | 3 h |
|---|-----|

returns to the main menu.

- i** After 30 seconds without user interaction, the device saves the setting and automatically returns to the main menu.




6 CLEANING AND MAINTENANCE

To keep your device working efficiently for a long time, it is important to clean and maintain it carefully.

6.1 CLEANING OVERVIEW

ATTENTION

Improper cleaning in the dishwasher can damage the components.





-  Follow the dishwasher user manual.
-  Only use cleaning programmes below 60°C/140°F.
-  Clean only suitable ones.

| Component dishwasher | Dishwasher |
|------------------------------|------------|
| Apparatus | ✗ |
| Drip tray | ✓ |
| Drip tray | ✓ |
| Beverage dispenser is | ✓ |
| Steam nozzle | ✓ |
| Lid for bean hopper | ✗ |
| Water tank | ✗ |
| Brewing unit | ✗ |
| Container for coffee grounds | ✓ |
| "Drip tray full" indicator | ✓ |
| Cover for beverage outlet | ✗ |

6.2 CLEANING ADVICE



ATTENTION

Unsuitable cleaning products can damage the surfaces of the device.

-  Do not use abrasive sponges.
-  Do not use harsh or abrasive cleaning agents.
-  Do not use cleaning agents that contain alcohol.
-  Always read the label to check if your cleaner or scourer is suitable.

ATTENTION





Unsuitable cleaning and descaling agents can damage the appliance.

-  Do not use pure citric acid, vinegar or other vinegar-based agents to descale the appliance.
-  Always read the label to check if your cleaning or descaling agent is suitable.

6.3 CLEANING THE DEVICE

Warning - risk of electric shock

Penetrating moisture can lead to electric shock.

-  Protect the device from extreme heat, moisture and water splashes.
-  Never use a steam cleaner for cleaning.
-  Never immerse the device, power plug or power cord in water.
-  Disconnect the device from the power supply before performing any cleaning or maintenance work.

 **Warning - risk of scalding**

Some parts of the device become hot during operation.


ⓘ Do not touch any part of the device before you let them cool down.

1. Clean the surfaces with a microfibre cloth.
2. Clean the coffee bean container with a damp cloth.


63.1 CLEANING THE DRIP TRAY AND COFFEE GROUNDS CONTAINER

Empty the drip tray daily or as soon as the float is visible.


1. remove the drip tray.

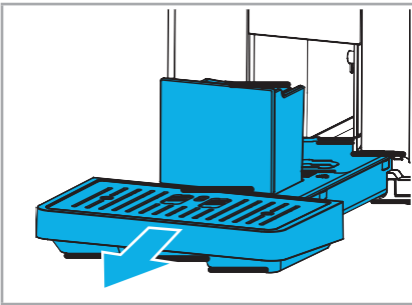

2. Empty the drip tray and coffee grounds container.
3. Clean the inside of the appliance with a soft cloth.

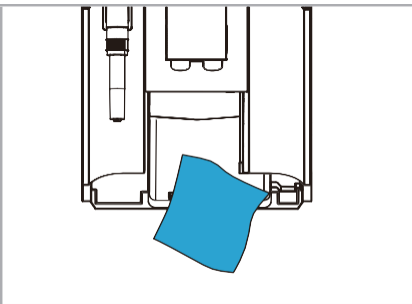

4. Clean all components.

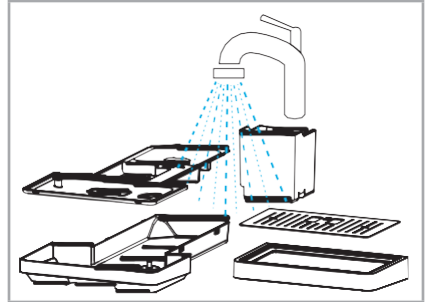


5. Insert the components into the device.
- ⓘ You can clean the drip tray and coffee grounds container in the dishwasher.


63.2 CLEANING THE BREWING UNIT

In addition to automatic rinsing, the brewing unit must be taken out once a week to be cleaned.


1. Disconnect the device from the power supply.
2. Pull the water tank out by the handle.
3. Open the service door.

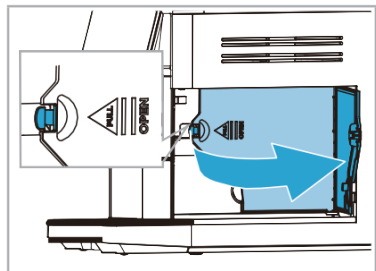


4. Press the orange locking mechanism to the right to unlock the brewing unit.

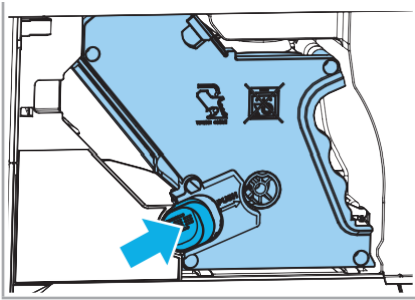


5. Remove the brewing unit.

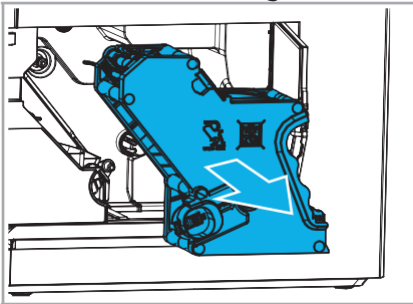

6. Clean the brewing unit under running water.

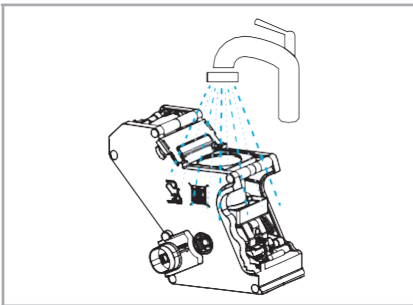

7. Clean the inside of the brewing chamber with a damp cloth.

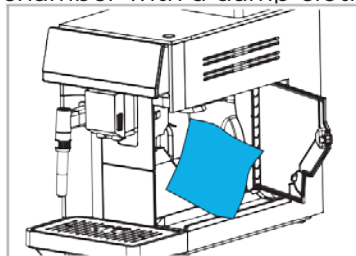

8. Allow the brewing unit and the inside of the appliance to dry.
9. Insert the brewing unit into the brewing chamber.
10. Close the service door.
11. Insert the water tank into the device.

633 CLEANING THE STEAM NOZZLE


Clean the steam nozzle after use to avoid milk residue build-up and blockages.

WARNING - RISK OF BURNS

The steam nozzle gets very hot during cooking.

- ⓘ Do not touch the steam nozzle until you have let them cool down.

1. Press [Steam] and give a little steam for a few seconds to empty the milk remaining in the steam nozzle.
2. Press [Steam] to stop the steam supply.
3. Wait a few minutes for the steam nozzle to cool down.
4. Remove the steam nozzle.
5. Clean the steam nozzle under running water.

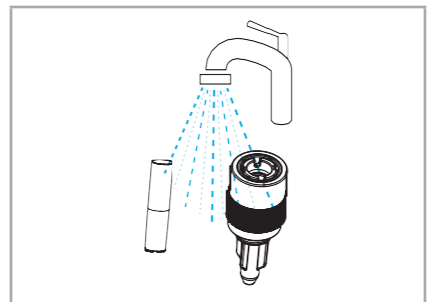


6. Dry the steam nozzle thoroughly.
7. Insert the steam nozzle into the steam nozzle holder.


6.34 CLEANING THE BEVERAGE DISPENSER

 **Warning - risk of scalding.**


The vending machine gets very hot during operation.

 Do not touch any part of the the device before you charge it them to cool down.


1. Remove the beverage outlet cover.

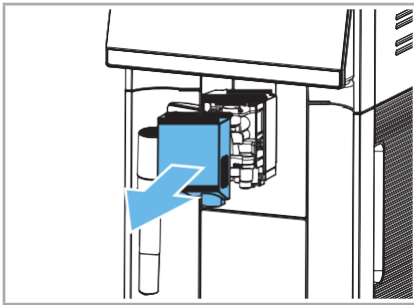


2. Open the metal bracket and remove the beverage dispenser.

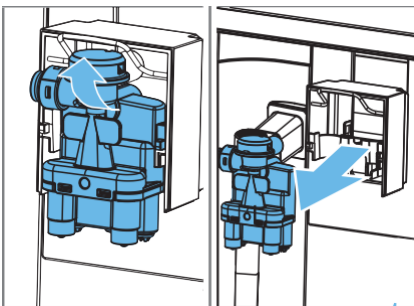


3. Dismantle the beverage dispenser.

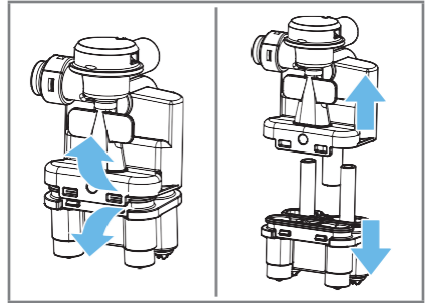

4. Clean the beverage dispenser under running water.

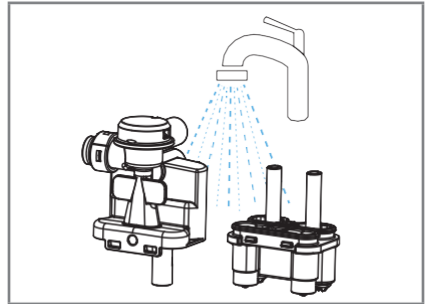


5. Wipe down the beverage dispenser thoroughly.
6. Reassemble the individual parts.
7. Insert the beverage dispenser into the beverage dispenser holder.
8. Close the metal bracket.
9. Put the beverage outlet cover on the beverage outlet.

 You can clean the beverage dispenser in the dishwasher.


6.35 Cleaning the ground coffee chute

The ground coffee chute should be cleaned every 3-5 days.

1. Remove the pre-ground coffee chute.
2. Clean the ground coffee chute under running water.

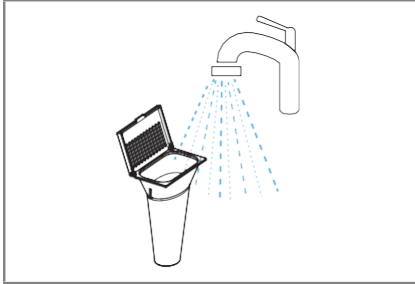

3. Pull out the water tank and remove the brewing unit.
4. Use the cleaning brush to remove the ground coffee powder remaining in the chamber.

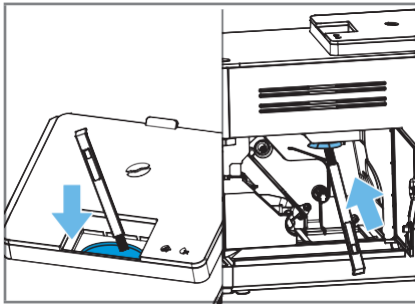


5. Clean the inside of the brewing chamber with a damp cloth.
6. Insert the brewing unit into the brewing chamber.
7. Close the service door.
8. Insert the water tank into the device.
9. Dry the pre-ground coffee shaft thoroughly.
10. Insert the ground coffee chute into the ground coffee chute chamber.

6.4 SERVICE PROGRAMMES

Your device has different service programmes.

⚠ ATTENTION

Improper descaling or delayed descaling can damage the appliance.


- ➊ Perform the descaling programme immediately according to the instructions.
- ➋ If the appliance is not descaled in good time, it will lock and  lights up.
- ➌ If your appliance has been locked, you can only use it again after the descaling programme has been completed.


USING PROGRAMMES

| | |
|-----------------|---|
| Cleaning coffee | Cleaning the device with a cleaning tablet |
| Descaling | Decalcification of appliance with descaling agent |


6.4.1 USING THE COFFEE CLEANING PROGRAMME

The programme lasts approximately 20 minutes.

 
- ➊  lights up at 50% brightness.

1. to start the coffee cleaning programme, press  for 3 seconds.

- ✔ [Clean] lights up at 100% brightness.
 - ✔ The coffee cleaning programme starts.
 - ✔ [Clean] flashes.
2. Remove and empty the drip tray and coffee grounds container.
 3. Insert the drip tray and coffee grounds container.
- ✔ [Clean] flashes.
4. Remove the water tank and fill it with lukewarm water up to the MAX mark.
 5. Put the water tank in place.
 6. Place a container with a capacity of at least 1.5 litres under the beverage outlet.

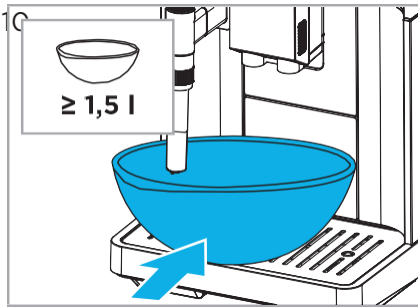

9. Insert a cleaning tablet Shaft for pre-ground coffee.

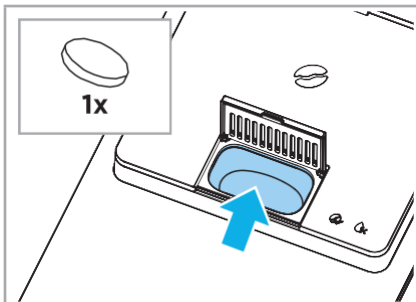

10. Tap [Clean] to resume the coffee cleaning programme.
- ✔ When the coffee cleaning programme is complete, the device returns to the main menu.
11. Remove and empty the container.
 12. Remove and empty the water tank.
 13. Fill the water tank with cold, fresh, non-carbonated drinking water and plug it back in.


6.42 USING THE DESCALING PROGRAMME



The programme lasts approximately 40 minutes.

- ✔ [Calc] lights up.
- 1 To start the descaling programme, press [Calc] for 3 seconds.
- ✔ The descaling programme starts.
 - ✔ [Clean] flashes.
- 2 Remove and empty the drip tray and coffee grounds container.
 3. Insert the drip tray and coffee grounds container.
- ✔ [Clean] flashes.
4. Remove the water tank and empty it.
 5. Remove the water filter if you use one.

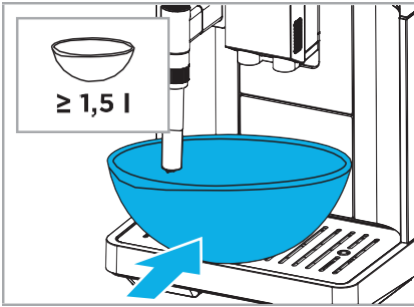

6. Fill the water tank with lukewarm water up to the 1 L mark.
7. Fill the descaling agent into the water tank according to the instructions on the packaging.
8. Put the water tank in place.
9. Place a container with a capacity of at least 1.5 litres under the beverage outlet.
17. Remove and empty the drip tray.
18. Insert the drip tray and coffee grounds container.

- ✔ When the descaling programme is complete, the device returns to the main menu.
- ⓘ Do not remove the container under the dispenser during the descaling process.









11. Tap [] to resume the descaling programme.
12. When [] flashes, it is empty. and rinse the water tank thoroughly.
13. Put the water filter in the water tank if you use one. Dimensions (H x W x D)







Maximum static pump pressure

14. Fill the water tank with cold water, fresh, non-carbonated drinks water up to the MAX mark and plug it back in.
15. Tap [] to resume the descaling programme.
- ✔ [] flashes.
16. Remove and empty the container.


8 Troubleshooting

Operating your device can lead to errors and malfunctions. The following tables contain possible causes and instructions for resolving an error message or malfunction. It is recommended to read the tables below carefully to save time and money that it may cost to call the service centre.

| Possible problems | Possible causes | Solution |
|---|---|--|
| [] flashes. | The water tank is almost empty. | ▶ Fill the water tank with fresh non-carbonated drinking water up to the MAX mark. <i>See the Chapter "Checking the water hardness"</i> |
| [] lights up. | The water tank is not inserted correctly. | ▶ Put the water tank correctly in place. |
| [] flashes. | The coffee grounds container is full. | <ol style="list-style-type: none"> 1. Empty the coffee grounds container. 2. Wait at least 5 seconds. 3. Reinsert the coffee grounds container. |
| [] lights up. | The coffee grounds container is not inserted correctly. | ▶ Insert the coffee grounds container correctly. |
| [] flashes white. | Too much or too little coffee was used. | ▶ Clean the brewing unit. <i>See chapter "Cleaning the brewing unit"</i> |
| [] lights up white. | The brewing unit is not inserted correctly. | ▶ Insert the brewing unit correctly. <i>See chapter "Cleaning the brewing unit"</i> |

| The | Possible causes | Solution |
|--|--|--|
| [] flashes. | The appliance must be descaled. | Use the descaling programme. <i>See chapter "Using the descaling programme"</i> |
| [] flashes. | The water filter needs to be replaced. | <ul style="list-style-type: none"> ▶ Replace the water filter. <i>See chapter "Changing the water filter".</i> |
| [] flashes. | The coffee bean container is almost empty. | <ul style="list-style-type: none"> ▶ Refill the coffee bean container. <i>See chapter "Filling the coffee bean hopper"</i> |
| [] flashes in red and the beverage symbol lights | The device has a Error. | <ul style="list-style-type: none"> ▶ Unplug the power cord from the wall socket from the power outlet and contact customer service. |
| [] continues to flash even if the water level is above the minimum amount. | <p>The float is stuck in the water tank.</p> <p>There is air in the water filter.</p> | <ul style="list-style-type: none"> ▶ Remove the water tank and clean it thoroughly. ▶ Dip the water filter in water until no more air bubbles escape and then replace the water filter. <i>See chapter "Replacing the water filter"</i> |
| The device no longer responds. | The device has an error. | <ol style="list-style-type: none"> 1. Unplug the mains plug and wait 1 minute. |
| [] continues to flash even if the coffee grounds container is empty. | If the device is switched off, the emptying of the coffee grounds container is not registered. | <ol style="list-style-type: none"> ▶ Plug the mains plug back in. 3. Press the [On/Off button]. <p>Always empty the container coffee grounds container while the appliance is switched on.</p> <ol style="list-style-type: none"> 1. Remove the empty coffee grounds container and wait for 5 seconds. 2. Insert the coffee grounds container again. |


| Possible problems | Possible causes | Solution |
|---|--|---|
| The coffee grounds container is full but [☕] is not flashing. | The drip tray was removed for more than 5 seconds without emptying the coffee grounds container. | <ol style="list-style-type: none"> 1. Empty the coffee grounds container when you remove the drip tray, even if it only contains a few coffee pods. <p>✔ The coffee grounds counter resets to 0 and starts counting coffee pucks correctly again.</p> <p>Clean the vending</p> |
| Coffee is not served or only served in drips. | The beverage dispenser or beverage dispenser holder is blocked. | <p>▶ machine manually. <i>See chapter "Cleaning the vending machine"</i></p> <p>Adjust the grinder to a coarser grind. <i>See</i></p> |
| | The grinding level is set too fine. | <p>▶ <i>chapter "Setting the grind setting"</i></p> |
| | The brewing unit is Dirty. | <p>▶ Clean the brewing unit. <i>See chapter "Cleaning the brewing unit"</i></p> |
| | There is air in the water filter. | <p>▶ Dip the water filter in water until no more air bubbles escape and then replace the water filter. <i>See chapter "Replacing the water filter"</i></p> |
| | Build-up of limescale in the appliance. | <p>▶ Use the descaling programme. <i>See chapter "Using the descaling programme"</i></p> |

| The | Possible causes | Solution |
|--|---|--|
| There is no coffee coming out of one or both spouts. | The vending machine is blocked. | ▶ Clean the vending machine manually. <i>See chapter "Cleaning the vending machine"</i> |
| Upon delivery the drink, the liquid Fleeing from beverage vending machine and splashes all over the place Drinking Dispenser | The lower part of the beverage vending machine is not correct in one place. | ▶ Put the drink together the dispenser correctly. <i>See the Chapter "Cleaning the beverage vending machine"</i> |
| Coffee quality varies greatly. The set amount has not been reached. | Limescale build-up | ▶ Use the descaling function programme. <i>See the chapter "Using the descaling programme"</i> |
| There is no milk foam formed when Frothy milk. | Ring off The steam nozzle turns to the '  ' position. | ▶ Turn the ring to Position. |
| | The steam nozzle is dirty. | ▶ Clean the steam nozzle manually. <i>See chapter "Cleaning the steam nozzle"</i> |
| | The steam nozzle is not mounted correctly. | ▶ Check the installation of the steam nozzle. <i>See chapter "Cleaning the steam nozzle"</i> |
| | The steam nozzle is blocked. | ▶ Clean the steam nozzle manually. <i>See chapter "Cleaning the steam nozzle"</i> |
| | The type of milk used is not suitable for making milk foam. | ▶ Do not use milk that has already been boiled. ▶ Use cold milk with a fat content of at least 1.5%. Use the descaling programme. <i>See chapter "Using the descaling programme"</i> |

| The | Possible causes | Solution |
|--|---|---|
| The coffee has no "crema" or is too Weak. | The coffee beans are unsuitable. | <ul style="list-style-type: none"> ▶ Use coffee beans Suitable for espresso machines. ▶ Use one type of coffee with a higher share of robusta beans. |
| | The coffee beans are No longer fresh. | ▶ Use fresh coffee beans. |
| | The grinding level is set too roughly. | <ul style="list-style-type: none"> ▶ Adjust the grinder to A finer degree of grinding. <i>See chapter "Setting the grinding degree"</i> |
| Coffee is not Warm enough. | The power of coffee is set too low. | <ul style="list-style-type: none"> ▶ Set the coffee strength to a higher value. <i>See chapter "Setting the coffee strength"</i> |
| | Coffees the temperature is set too low. | ▶ Put the coffee in its place temperature to a higher value. <i>See the chapter "Adjusting the coffee temperature"</i> |
| Earth The ground coffee blocks the coffee powder chute. | The cup is cold. | ▶ How to preheat the cups, Rinse them with warm water Water. |
| | Coffee powder The shaft is moist. The ground coffee is compressed too much. | <ul style="list-style-type: none"> ▶ Remove the coffee Powder chute, clean and dry it thoroughly. ▶ Do not press the ground coffee too hard into the measuring spoon. |

| The | Possible causes | Solution |
|--|---|---|
| The coffee grounds are not compact and are too wet. | The grinder setting is too fine or too coarse, or not enough ground coffee has been used. | <ul style="list-style-type: none"> ▶ Adjust the grind to a finer or coarser setting. <i>See chapter "Setting the degree of grinding"</i> ▶ Use a full measuring spoon of ground coffee. |
| The water filter does not stay in place in the water tank. | An incorrect water filter is being used. | <ul style="list-style-type: none"> ▶ Only use original spare parts. <i>See chapter "Accessories"</i> |
| | The rubber ring on the water filter is not in place. | <ul style="list-style-type: none"> ▶ Put the rubber ring back on the water filter. |
| The service door does not close properly. | The brewing unit is not inserted correctly. | <ul style="list-style-type: none"> ▶ Insert the brewing unit correctly. <i>See chapter "Cleaning the brewing unit"</i> |
| | There is too much ground coffee in the brewing chamber. | <ul style="list-style-type: none"> ▶ Clean the brewing unit. Serve a drink made from coffee beans. |
| The grinder setting is difficult to adjust. | There are too many beans in the grinder. | <ul style="list-style-type: none"> ⓘ Adjust the grinding degree only slightly. Empty the drip tray daily or as soon as the float is visible. |
| The appliance appears to be leaking. | The drip tray is too full and overflows. | <ul style="list-style-type: none"> ▶ Make sure the water tank is inserted correctly. |
| | The water tank is not inserted correctly. | <ul style="list-style-type: none"> ▶ Place the device on a waterproof, flat and sufficiently stable surface. <i>See chapter "Setting up the device"</i> |
| | The device is not placed on a flat surface. | <ul style="list-style-type: none"> ▶ Wait and then activate the steam function again. |
| The steam delivery stops. | A safety device stops the steam supply after 3 minutes. | <ul style="list-style-type: none"> ▶ again. |

| The | Possible causes | Solution |
|--|--|---|
| The device suddenly returns to the main menu. | The appliance is too hot. | ▶ Switch off the device for 30 minutes. |
| The beverage symbols switch on suddenly and switch off slowly one after the other while the drink is being prepared. | The drip tray or water tank was removed during cooking. | <p>❗ Do not remove the drip tray or water tank while the drink is being prepared.</p> <ol style="list-style-type: none"> Put the drip tray and water tank back into the device. Wait until the device returns to the main menu. |
| Very frequent indication that descaling is necessary. | The water hardness setting is too hard. | <p>▶ Insert the water filter and set the water hardness as described.</p> <p><i>See chapter "Water hardness control"</i></p> |
| The device makes unusually loud noises. | There is air in the water filter. | <p>▶ Dip the water filter in water until no more air bubbles escape and then replace the water filter. <i>See chapter "Replacing the water filter"</i></p> |
| | The water tank is not inserted correctly. | <p>▶ Make sure the water tank is inserted correctly.</p> |
| The coffee bean container is empty, but [☞] did not flash. | The oil from the coffee beans has contaminated the detection window in the coffee bean hopper. | <p>▶ Use the cleaning brush to clean the coffee bean hopper registration window regularly.</p> |

| The | Possible causes | Solution |
|---|--|---|
| The coffee bean hopper still contains beans, but [] is | Coffee beans do not fall into the grinder. | ▶ Use the cleaning brush to throw the coffee beans into the grinder. |
| The machine dispensed coffee liquid during the automatic rinse cycle. | Ground coffee was added before the device was switched on. | ▶ Only add ground coffee when the device is switched on. |
| | Ground coffee into the brewing unit. | ▶ Clean the brewing unit. <i>See chapter "Cleaning the brewing unit"</i> |

9 Disposal and recycling

9.1 IMPORTANT INSTRUCTIONS FOR Environment

Compliance with the WEEE directive and disposal of the waste product:

This product complies with the EU WEEE Directive (2012/19/EU). This product carries a classification symbol for waste electrical and electronic equipment (WEEE).

This symbol indicates that this product must not be disposed of with other household waste at the end of its useful life.



Used appliances must be returned to an official collection point for the recycling of electrical and electronic appliances. To find these collection systems, contact your local authorities or the retailer where the product was purchased. Every household plays an important role in the collection and recycling of old appliances.

Proper disposal of used appliances helps prevent potential negative consequences for the environment and human health.

9.2 INFORMATION ABOUT THE PACKAGE

The product packaging materials are made from recyclable materials in accordance with our national environmental regulations. Do not dispose of the packaging materials with household or other waste. Take them to the collection points for packaging materials designated by the local authorities.

THERMEX SCANDINAVIA A/S

Farøvej 30 ■ 9800 Hjørring ■ Danmark
Tlf. +45 98 92 62 33
www.thermex.dk
service@thermex.dk

THERMEX SCANDINAVIA AS

Tel. +47 22 21 90 20
www.thermex.no
service@thermex.no

THERMEX SCANDINAVIA AB

Tel. 031 340 82 00
www.thermex.se
info@thermex.se

THERMEX SCANDINAVIA S.L.U.

Noi del Sucre 42 ■ 08840 Viladecans ■ España
Tel. +34 936 373 003
www.thermex.es
info@thermex.es

THERMEX SCANDINAVIA A/S

Puhelin +358 942 454 000
www.thermex.fi
info@thermex.fi

